

SceneStation™ User's Manual

Version 2.1



Interactive
Technologies

Interactive Technologies, Inc.

5040 Magnolia Creek Drive

Cumming, GA 30028 USA

Phone: 678-455-9019

Fax: 678-455-9071

Email: info@interactive-online.com
 support@interactive-online.com

Web: <http://www.interactive-online.com/>

SceneStation and the Interactive Technologies logo are trademarks of Interactive Technologies, Inc. All other trademarks referenced in this document are the property of their respective owners.

The SceneStation firmware, design and documentation are copyrighted by Interactive Technologies, Inc. The firmware used in SceneStation embodies valuable trade secrets proprietary to Interactive Technologies, Inc. and is licensed, not sold, and may not be duplicated in any way.

Crestron, AMX, Vantage, Control4, Decora and Mac are registered trademarks of their respective owners.

Specifications subject to change without notice.

Copyright © 2008-2010 Interactive Technologies, Inc. All rights reserved worldwide.

Printed in the United States of America.

Document D0311

Revised 5/26/10

Table of Contents

Introduction	1
A Quick Tour of SceneStation's Main Features	2
Stand-Alone Playback.	2
Presets	2
Buttons.	3
Wireless Control	3
IR Remote Control	4
DMX Capture and Backup	4
Attractive Design.	4
Easy Installation	4
Installation	7
Architectural	7
Portable Enclosure	9
Hardware Configuration	11
Configuration Display	11
Dip Switch Settings.	11
Switch Bank 1	12
Switch Bank 2	13
Using SceneStation Studio	15
Managing Stations	16
Offline Stations	17
Copying Station Data	18
Remotely Controlling Stations.	19
Programming Stations	20
Synchronizing Data With Stations	21
Saving Show Files.	21
Opening and Importing Show Files	22
General Settings	23
Show Name	23
Station PIN	23
Startup Preset.	24
Enable Buttons	24
Enable Grandmaster	24
Receive Wireless Button Commands	24
IR Receiver	25
Pair with Remote.	25

Allow Editing with Remote	25
Direct Access Preset Codes	26
Buttons	27
Button List	27
Name	27
Function	28
Preset	28
Operate	29
Presets	30
Preset List	30
Name	31
Fade Time	31
Follow Time	32
Loop To Preset	32
Indicator Options	33
Levels	34
Preset List	34
Channel List	34
DMX Slider	35
DMX Options	36
When DMX Input is Detected	36
When DMX Output is Restored	37

Using the Programmer’s Remote 39

Playback Mode	40
Activating Presets	40
Adjusting the Grandmaster	40
Stepping Through Presets	41
Locking Station Buttons	41
Preset Edit Mode	42
Edit Scene	43
Edit Fade Time	44
Edit Follow Time	45
Edit Loop to Preset	46
Edit Repeat Count	47
Edit LED Indicators	48
Copy Preset	49
Button Edit Mode	50
Set a Button’s Preset	50
Set a Button’s Function	50
DMX Record Mode	52
Record a DMX Snapshot	52

Station Options	53
900: Startup Preset	53
901: Wireless PIN	53
902: Grandmaster Enable	53
903: Lock Buttons	53
904: Deselect Preset	54
905: DMX Output Restore	54
961: Display Firmware Version	54
962: Enter Self-Test Mode	54
981: Recall Built-In Show 1	55
982: Recall Built-In Show 2	55
989: Erase Memory	55
Programming Examples	57
Example 1: Create a Preset	58
Example 2: Assign a Preset to a Button	59
Example 3: Set Timing Parameters for a Preset	60
Example 4: Program a Button to Toggle a Preset	61
Example 5: Create a Loop	62
Example 6: Change the Indicator Color for a Preset	63
Example 7: Program a Button to Activate Multiple Presets	64
Appendix A: Pairing The Programmer's Remote	67
Setting the IR Code on the Remote	67
Setting the IR Code on the Station	67
Appendix B: IR Code Specifications	69
SceneStation Remote	69
Discrete Preset Activation Codes	71
Appendix C: Determining Firmware Version	73
Appendix D: Self Test Mode	75
Appendix E: Warranty Information	79

Introduction

SceneStation is an advanced lighting control playback device for use with all types of DMX based digital lighting fixtures that can fit into a wide variety of commercial, residential and entertainment projects.

SceneStation offers a wide array of features including:

- **Stand-Alone Playback** - Outputs DMX data for direct connection to digital dimmers and lighting fixtures.
- **Preset Scenes** - Handles up to 64 presets, each with independent split fade times, follow timers, looping and repeat counts.
- **Customizable Buttons** - Each button can activate a preset, toggle a scene, start an animated chase, choose from a list of scenes, momentarily flash a preset, activate a pile-on scene and more. Also, each button is backlit by a programmable RGB LED with hundreds of color and blinking options.
- **Wireless Control** - Stations may optionally contain an 2.4 GHz wireless module for triggering buttons between multiple stations, and for communication with a host Mac or PC for show programming and software updates.
- **IR Remote Control** - An infrared receiver in each station allows the station to be operated by universal remote control or via home/commercial automation systems, or with the optional Programmer's Remote for show programming.
- **DMX Capture and Backup** - The station can also input DMX for taking DMX snapshots or for allowing the station to operate as an automatic backup for another DMX controller with programmable actions that can be activated when an external DMX controller stops outputting a DMX signal.
- **Attractive Design** - SceneStation is available in White, Black, Ivory and Almond with stylish Decora® compatible plastics, a designer flushplate with no visible hardware and custom engraved button caps.
- **Easy Installation** - Each station fits into a standard single-gang electrical box and only requires power (12 to 24 volts AC or DC) and a DMX data cable. Stations that are operating as a wireless slave to another station only requires power.

A Quick Tour of SceneStation's Main Features

Stand-Alone Playback

SceneStation is designed to be a completely self-contained DMX controller that can be wall-mounted (like a light switch) or used in a portable enclosure. SceneStation directly outputs (or receives) DMX data so it can be connected directly to one or more lighting fixtures, LED power supplies or digital dimmers.

SceneStations are programmed by using either the free SceneStation Studio software (available for both Mac and PC computers) or by using the Programmer's IR Remote. The Studio software works with wireless SceneStations through the use of a USB dongle on the computer and the Programmer's Remote works with both wireless and non-wireless SceneStations.

After the programming of a station is complete, the station operates on its own without needing to be connected to a computer or other processor.

Presets

A "Preset" is the basic building-block of how SceneStation controls lighting fixtures. Each preset in SceneStation's internal memory stores several pieces of information, including a scene, several timing parameters, looping information and indicator colors. Each of these pieces of information are called a preset's properties.

Depending on how SceneStation will be used, the word "Preset" can be interchanged with either "Scene" or "Cue". For example, in Entertainment Lighting where users typically use lighting control consoles, they may think of each of Preset as a Cue and the group of all Presets in the station as a Cue List.

Here's a quick description of each of the properties of a preset:

- **Scene** - A collection of DMX channel values that make up a single "look" of all of the lighting fixtures connected to the station. For example, a scene might be how the lights look in a home entertainment room while watching a movie.
- **Fade Time** - The amount of time it takes to crossfade to a new scene. A fade time of zero causes a scene to appear immediately. Fade times can be chosen from 0.01 seconds all the way up to 24 hours. Optionally, a Split Fade Time can be used, which specifies a different fade time for channels increasing in value and those decreasing in value.
- **Follow Time** - The amount of time from the moment that a preset is activated that the station will automatically advance (follow) to the next preset. If the Loop property is set, then the follow will jump to this other preset instead. Follow times can be chosen from 0.01 seconds all the way up to 24 hours.
- **Loop** - An alternate preset that should follow this preset. Normally, when stepping from one preset to the next (either manually or automatically using Follow times), presets follow each

other in numerical order. The Loop parameter can be used to choose a different preset that should come after the current preset. For example, to make a loop from presets 1, 2, 3, 4 and then back to 1, the Loop property of preset 4 should be set to “1”.

- **Repeat** - A preset that has a Loop property set can also specify how many times that loop should be repeated by setting this property. A repeat of “0” means that a loop executes indefinitely. A non-zero repeat specifies how many times the loop will be taken before the loop “falls-through” to the next preset.
- **Indicator** - Each preset specifies the colors that a station button should illuminate when the preset is assigned to a button. Each preset has separate user-definable colors for “Active” and “Inactive” states as well as a button flashing pattern.

Buttons

There are five push buttons on the front of a SceneStation. SceneStation buttons have a wide variety of programmable options that can allow each button to have multiple functions.

A button can simply activate a preset, or it can toggle a preset on and off. Additionally, if a preset is part of a loop (or chase) of several presets, the button can activate the loop. A single button can also be set to step through several presets manually with each press, or just flash a preset momentarily while the button is held down and more.

Each button has several properties that are used to customize the function of each button:

- **Function** - This is the primary function of each button. Choices include Normal, Toggle, Sequential, Latched, Momentary, Pile-On and more.
- **Preset** - The number of the preset that is activated by the button. In some cases this is the number of the first preset in a group of presets that are activated by the button.
- **Wireless Groups** - For wirelessly triggering events on other SceneStations, this property contains a list of the wireless groups that this button transmits it's function to.

Wireless Control

If a SceneStation has the optional 2.4 GHz wireless feature, it can wirelessly communicate with other stations in the same network. This feature allows stations to wirelessly trigger presets and provide feedback between each other. Remote stations can trigger the same presets on a station or different ones - effectively adding to the number of buttons available on a station.

With the wireless feature, a USB dongle can be attached to a Mac or PC computer to remotely program and administer stations using the free SceneStation Studio tool (available from the Interactive Technologies web site).

IR Remote Control

All SceneStations have an infrared remote receiver for activating presets, raising or lowering the grandmaster (the overall brightness of the station), or for programming the station.

The available Programmer's Remote can be used to recall presets, step from one preset to another, adjust the brightness of the station and program presets, buttons and their properties.

Users can teach a universal remote control (popular with home theater setups) to trigger presets in a SceneStation or use automation systems (such as Crestron®, AMX®, Vantage®, Control4®, etc.) to send the appropriate IR signals to a SceneStation to operate it.

DMX Capture and Backup

The DMX port on SceneStation is bidirectional, allowing it to either send or receive DMX signals. If a SceneStation is wired “in-line” with another DMX controller, the station automatically gives the other controller priority over controlling the lighting fixtures.

This feature allows a SceneStation to be used as a backup device. Whenever the other controller stops outputting DMX to the lighting fixtures, the SceneStation will begin outputting its own data, functioning as a backup to the other controller.

SceneStation can be programmed to perform one of several actions when the external DMX controller stops outputting DMX, such as automatically activating a preset, continuing to maintain the previous scene being sent by the other controller, or fading out the scene to black.

SceneStation can also use its DMX input to record (take a snapshot of) the incoming DMX signal into any of the station's presets.

Attractive Design

Featuring an attractive front panel that fits a Decora® type wall plate, SceneStation has a minimal design that fits into the decor of most any project. SceneStation is available in White, Black, Ivory or Almond color schemes with engravable button caps for optional labeling of the button functions. RGB style LED backlighting behind each button can be customized to fit different styles and needs.

Easy Installation

SceneStation was designed for easy installation. It fits neatly into a standard single-gang electrical box and only requires two connections, one for power and one for DMX.

SceneStation's power requirements are minimal and flexible. The station can be powered by a 12 to 24 volt source, either AC or DC.

If the station is connected to lighting fixtures or another DMX controller, then the station requires a DMX cable as well. If the station is being used exclusively as a wireless slave to one or more other stations, then the DMX cabling is not needed.

Installation

SceneStation is designed to be installed into either a standard single-gang electrical box for Architectural applications or in our portable enclosure for temporary applications.

Architectural

For architectural installations, SceneStation is typically installed in wall by use of a standard single-gang electrical box. SceneStation is approximately the same size as a standard residential dimmer switch (see specifications for exact dimensions).

SceneStation comes with a two-piece designer wall plate that finishes the installation with a professional look that shows no visible hardware (screws). Multiple gang wall plates are also available. If desired, SceneStation can also be mounted in a 3rd party Decora® style wall plate, however you may need additional mounting screws if using your own wall plate.

Power for the station is supplied by a Class 2 transformer that provides between 12 to 24 volts, either AC or DC. The transformer must output 12 watts or more. This translates to 1000mA for a 12 volt supply and 500mA for a 24 volt supply.

If the station is going to be used to output DMX to one or more lighting fixtures, a suitable DMX cable should be run from the station location to the first DMX fixture. Additional DMX fixtures are daisy-chained from the first fixture.

If the station requires a DMX input from another source, a separate DMX cable must be run from the other controller to the station.

If the station is going to be used as a wireless slave to another station, no DMX cabling is required.

See the figure on the next page for a diagram of the typical wiring connections to SceneStation.

Recommended DMX-512 Cable Types

CAT5E

- White/Brown = DMX Ground (Black)
- Orange = DMX Data - (Brown)
- White/Orange = DMX Data + (Red)
- Others = Unused

Belden 9842


- Drain Wire = DMX Ground (Black)
- Blue/White = DMX Data - (Brown)
- White/Blue = DMX Data + (Red)
- Orange/White = Unused
- White/Orange = Unused

Other similar 100-120 ohm twisted-pair RS-485 compatible computer communication cable may be used.

DMX Input Note:

SceneStation uses a bi-directional DMX Port for both DMX Input and Output. If no Input DMX signal is detected, SceneStation will output a DMX signal. If an Input signal is detected (from another console or controller), SceneStation will automatically go into "passive" mode, which allows the upstream controller to be in full control of the DMX fixtures. SceneStation also uses this mode to record DMX scenes from the external source.

Class 2 Power Supply
12-24V AC or DC
6 watts minimum

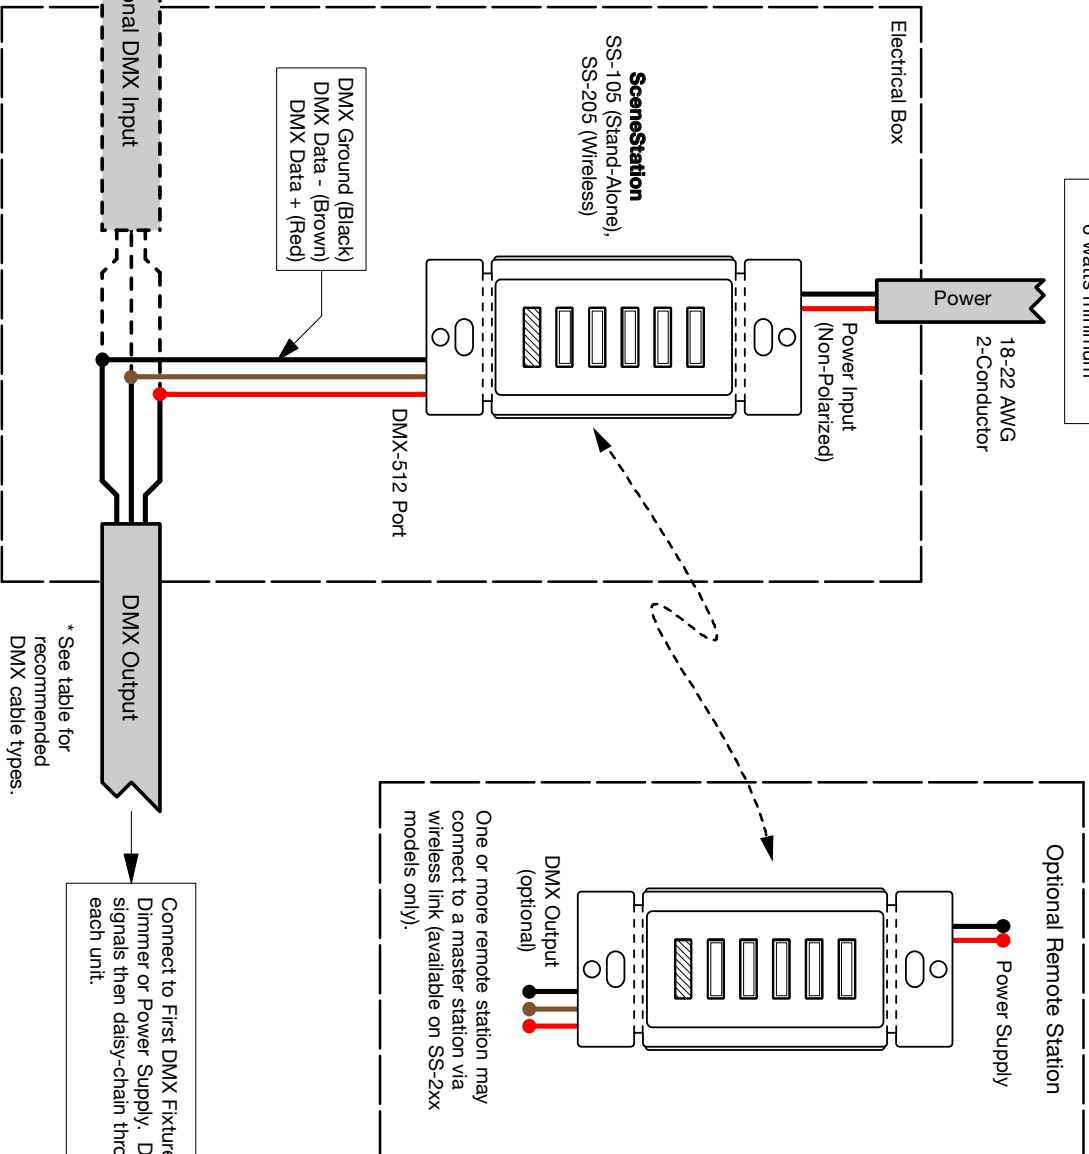

Optional input from DMX console or controller.

Optional DMX Input

DMX Output

Connect to First DMX Fixture, Dimmer or Power Supply. DMX signals than daisy-chain through each unit.

SceneStation Typical Wiring Diagram



Interactive Technologies, Inc.
5040 Magnolia Creek Drive
Cumming, GA 30028 USA
678-455-9019 (Phone) • 678-455-9071 (Fax)
www.interactive-online.com

Drawn By: Rob Johnston
Date: 9/1/2009
Scale: R/Bp (inches)
1:1
Units: Millimeters (Inches)

Revision A

Portable Enclosure

The SceneStation Portable Enclosure is useful for any application where portability and convenience are required.

The Portable Enclosure houses a SceneStation and provides a DC power input jack for connecting an AC Adaptor as well as both Male and Female 5-pin XLR connections for connection to DMX networks.

The station itself is identical to the Architectural version, it just comes packaged as a self-contained, ready to operate kit with the necessary wiring to convenient jacks already made.

Hardware Configuration

See the following sections on hardware configurations and dip switch settings for SceneStation.

Configuration Display

When a SceneStation is powered-on, it briefly displays a scrolling rainbow pattern on its LEDs. After about one second of this display, all of the LEDs settle on a single color before fading out. The color that the station displays indicates the hardware configuration of the station. The following list shows the possible configurations:

- All LEDs Red = Stand-Alone, Non-Wireless Model (SS-105)
- All LEDs Green = Wireless Model (SS-205)


Dip Switch Settings

Nearly all station programming is performed via the optional wireless connection to the SceneStation Studio software or through the infrared Programmer's Remote. Therefore, there are very few hardware settings that can (or need) to be set.

SceneStation has two banks of eight dip switches (16 switches in total) on the back of the station that are used for setting hardware-level features and to change the default settings for the IR remote.

By default, all switches are set to the "Off" position.

The function of each of the switches are described below:

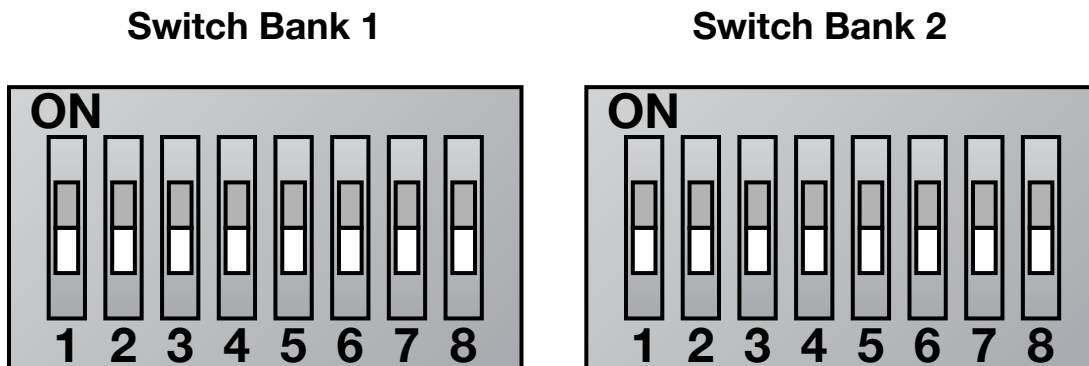

Switch Bank 1

- **1: DMX Pull-Up** - Enables a weak pull-up resistor on the DMX Data + line. Normally, this is not required and should remain "Off".
- **2: DMX Pull-Down** - Enables a weak pull-down resistor on the DMX Data - line. Normally, this is not required and should remain "Off".
- **3: DMX Terminate** - Enables a DMX termination resistor on the DMX port. This should only be necessary when the SceneStation is at the end of a long line of DMX devices receiving DMX data from another source. Normally, this is not required and should remain "Off".
- **4: DMX Output Only** - When turned "On", this switch disables the bidirectional DMX data port, making SceneStation only able to output DMX. This function can be enabled if a special circumstance requires that the station ignore DMX input. Normally, this switch should remain "Off".
- **5: Reserved** - This switch is currently unused. Leave in the "Off" position.
- **6: Reserved** - This switch is currently unused. Leave in the "Off" position.
- **7: Reserved** - This switch is currently unused. Leave in the "Off" position.
- **8: Reserved** - This switch is currently unused. Leave in the "Off" position.

Switch Bank 2

- **1: Reserved** - This switch is currently unused. Leave in the “Off” position.
- **2: Reserved** - This switch is currently unused. Leave in the “Off” position.
- **3: Reserved** - This switch is currently unused. Leave in the “Off” position.
- **4: IR Memory Lock** - When turned “On”, this switch disables the ability for the IR Programmer’s Remote to edit the memory of the SceneStation. This setting can also be turned on or off by an option available in SceneStation Studio.
- **5: IR Direct Preset Codes** - When turned “On”, this switch enables the “Direct Preset Codes” feature. This feature enables additional IR codes that directly activate any of the 64 presets in the station. This setting can also be turned on or off by an option available in SceneStation Studio.
- **6, 7, 8: Pair With IR Remote** - These three switches choose which remote IR code the station will receive commands from. Use this setting to set specific remote controls to operate only specific stations. This setting can also be chosen by an option available in SceneStation Studio. The following table shows which combination of switches correspond to which options:

6	7	8	Pair With Remote
OFF	OFF	OFF	Remote Code 1
OFF	OFF	ON	Remote Code 2
OFF	ON	OFF	Remote Code 3
OFF	ON	ON	Remote Code 4
ON	OFF	OFF	Remote Code 5
ON	OFF	ON	Remote Code 6
ON	ON	OFF	All Remotes
ON	ON	ON	No Remotes

Note: See Appendix A for instructions for changing the IR code used by the Programmer’s Remote.

Using SceneStation Studio

A free application is available from the Interactive Technologies web site called SceneStation Studio that is used to manage and program one or more wireless SceneStations using the SceneStation USB dongle connected to either a **Mac** or **PC** computer running Windows.

SceneStation Studio can be used for the following actions:

- **Find Stations** - The application searches for and displays nearby SceneStations.
- **Remotely Control Stations** - A remote control window can be opened that allows the user to operate a station remotely.
- **Program Stations** - A full programming environment that allows the user to change settings and program buttons and presets all in a graphical format.
- **Offline Editor** - Configuration files can be created, edited and saved without requiring a station or USB dongle.
- **Manage Configuration Files** - Load and Save station configuration files to and from your Mac or PC computer.
- **Handle Security** - Wireless communications between stations and the computer can be made secure by using PIN numbers.


The following chapters describe in detail how to use these various aspects of SceneStation Studio.

Note: The screen pictures shown below may appear differently on your computer depending on the operating system and improvements that may have been added to the software since this manual was written. Although most of the screen shots that follow are from the Mac version of the software, it is also available for Windows.

Managing Stations

When SceneStation Studio is opened on your computer, a list view window appears that is used to display all stations that are found wirelessly and stations that have been newly created or loaded from a file.

This picture shows the main list view window of SceneStation Studio with two wireless stations in range:

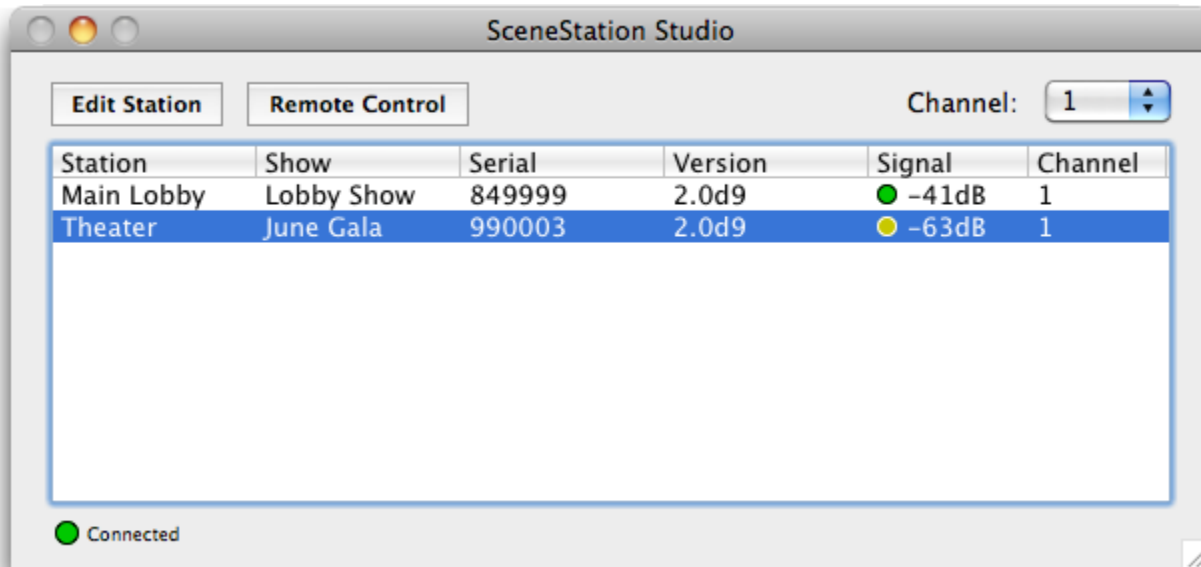

Wireless Stations

Any stations that are discovered wirelessly by the USB Dongle will appear in the list and include the following information:

- **Station** - The user-defined name of the station.
- **Show** - The name of the show currently running in the station.
- **Serial** - The serial number of the station.
- **Version** - The version number of the firmware running in the station.
- **Signal** - The signal strength of the wireless signal to the station. A colored indicator (Green, Yellow, Red) gives a rough estimate of the overall signal strength.
- **Channel** - The RF Channel currently being used by the station.

If no USB Dongle is connected or no wireless stations are in range, this window will remain empty until a station comes within range or an offline station is created or loaded from a file.

Note: If a station has a PIN number, the user is prevented from uploading or downloading data, or making changes of any kind until the proper PIN number has been entered.


Offline Stations

SceneStation Studio can also create new station files or open station files stored on the computer for offline editing.

A new offline station can be created by using the **File > New** menu item.

An existing station file can be opened for offline editing by using the **File > Open** menu item.

When an offline station is created or opened, it appears in the main window along with any online stations that have been discovered:

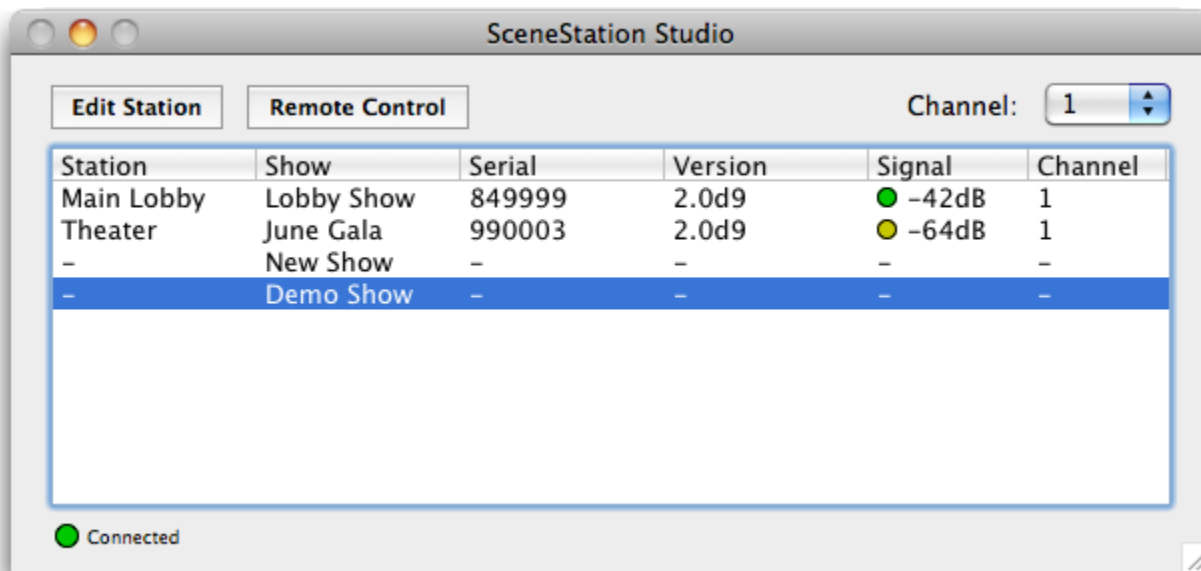


Offline stations show only the show name in the list view. All other properties in the list view only apply to online stations.


Copying Station Data

You can Drag & Drop from one station in the list to another to copy the data from one station to another.

While dragging, the cursor turns to a Hand icon:

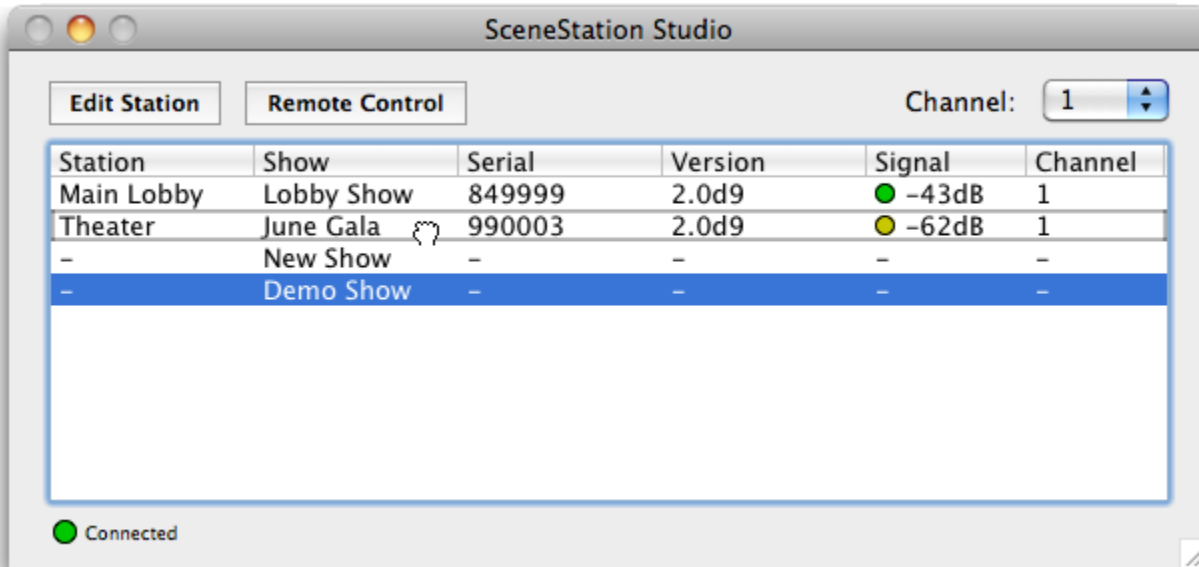

When one station is dropped onto another, SceneStation Studio will ask if you want to perform the copy operation:

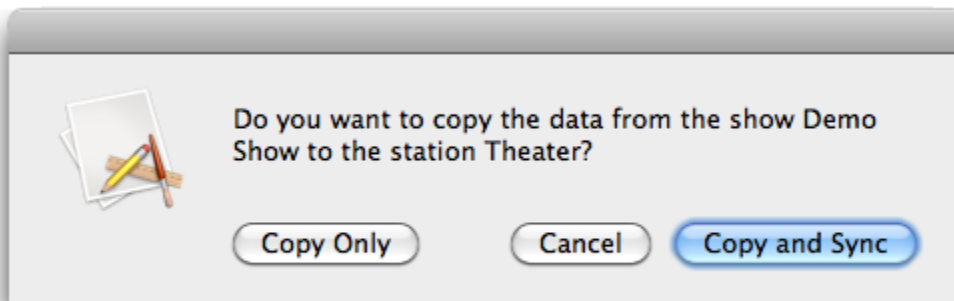


When copying from one station to another, the user is presented with the following options:

- **Copy and Sync** - The data is copied from the dragged station to the station that was the recipient of the drop. Then, the new station's data is uploaded to the station.
- **Copy Only** - The data is copied from the dragged station to the station that was the recipient of the drop. The new data is not uploaded to the station.
- **Cancel** - This choice cancels the operation.

Remotely Controlling Stations

When an online station is selected in the list view, click on the **Remote Control** button to open the Remote Control window.

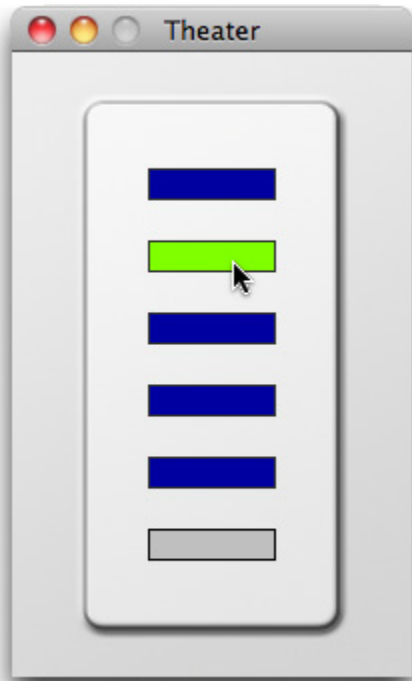

This small window shows a simulation of the buttons on the chosen SceneStation with each button appearing with its “live” button color.


Each button can be clicked to wirelessly send a button press to the actual station. Whatever function that would occur with on the station will be triggered remotely by this tool and the resulting change in LEDs will appear in this window.

Note: If a station has a PIN number, the user is prevented from remotely controlling the station until the proper PIN number has been entered.

Programming Stations

To change any of the programming in either a connected wireless station or an offline station in the list view, you can either click on the **Edit Station** button or double-click on the station in the list view.

The first time you try to edit a station that's online, SceneStation Studio will first download the configuration data from the station:

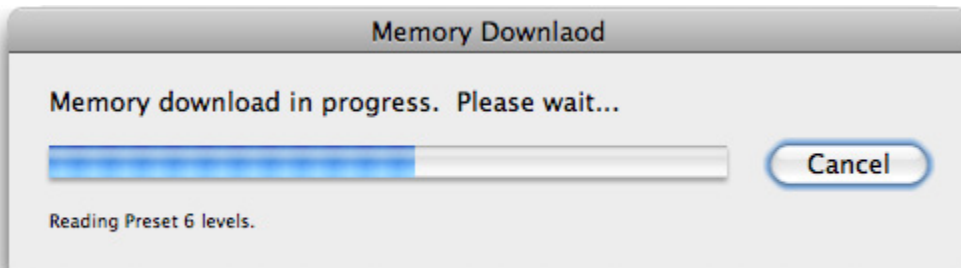

Once the data is downloaded from the station (or immediately if you're editing an offline station), the station's Editor Window will appear:



The Editor Window is divided into five sections, which can be selected by clicking on the appropriate tab across the top of the window:

- **General Settings** - Has settings for the Show Name, PIN, Startup Preset, Button and Grandmaster enabling and for Receiving Wireless Button Commands.

- **IR Receiver** - Sets which IR remote the station is paired to and other related IR remote preferences.
- **Buttons** - Sets each of the station's button properties, such as Name, Function, Preset and Wireless Groups.
- **Presets** - Edits each of the station's preset parameters, such as Name, Fade and Follow Times, Loop, Repeat and Indicator colors.
- **Levels** - Edits each preset's DMX channel levels.

Synchronizing Data With Stations

When editing data on a live station you have an active wireless link to, **Sync** and **Revert** buttons appear at the bottom of the editor window.



The Sync button is used to upload the edited data back to the station.

The Revert button is used to re-download the data in the station back to the editor window (effectively cancelling any changes that might have been made).


Saving Show Files

When editing a station, the programming can be saved to a file at any time by using the **File > Save** menu option.

A dialog window will appear that allows you to choose where the file will be saved.

Opening and Importing Show Files

While using the editor window, if the **File > Open** menu option is selected, the user will be presented with a choice to either open the file as a new station or to import the data from the file into the station you're editing.

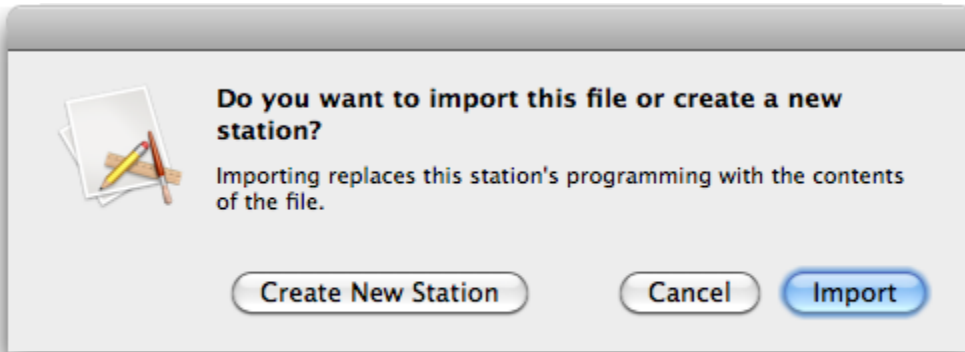

If you choose to Import, the contents of the file will be loaded into the current station.

If you choose to Create a New Station, the file will open as a new station to edit.

General Settings

The General Settings tab of the station editor window is used to view and/or modify the following station parameters.



Show Name

The Show Name is used to provide a simple descriptive name for the show. This name is simply for your own convenience.

Station PIN

The Station PIN is a security feature. If a station has a PIN number set, then future attempts to upload or download data to the station will require a PIN number before the operation will succeed.

Additionally, the Remote Control window and attempts to update a station's firmware also requires the station's PIN number to operate.

Finally, when two or more stations are programmed to wirelessly share button presses and indicator feedback, they must be using the same PIN number. If two stations have two different PIN numbers, they will not be able to communicate with each other.

To remove or disable the PIN number feature, set the PIN number to zero (0).

Startup Preset

When a station is powered on, it can automatically activate a preset. This setting allows any of the 64 presets in the station to be activated on power-on.

Enable Buttons

If this option is checked, the front-panel buttons on the station are enabled and work normally when pressed. If this option is not checked, the buttons will be locked.

When a user presses a locked button on the front of the station, all buttons briefly flash Red and no action is taken by the station.

Enable Grandmaster

The station's "Grandmaster" is the overall intensity level of the DMX channel values being output from the station. The Grandmaster can be adjusted from 0 to 100% by using the IR remote control. Normally, the Grandmaster is set to 100%. When a level lower than 100% is chosen, all of the DMX channel values are scaled down by that percentage before being output by the station.

If this option is checked, the Grandmaster is functional and a user with the IR remote can raise and lower the brightness level of the station.

If this option is not checked, the Grandmaster function is disabled and the station always outputs its presets at 100%.

Receive Wireless Button Commands


If this station is to receive wireless button commands from another station, this setting is used to specify which wireless group the station should belong to.

Use the popup menu to choose a wireless group to accept commands for.

If this station does not need to receive wireless button commands from another station, choose Disabled.

IR Receiver

The IR Receiver tab of the station editor window is used to view and/or modify the following station parameters.

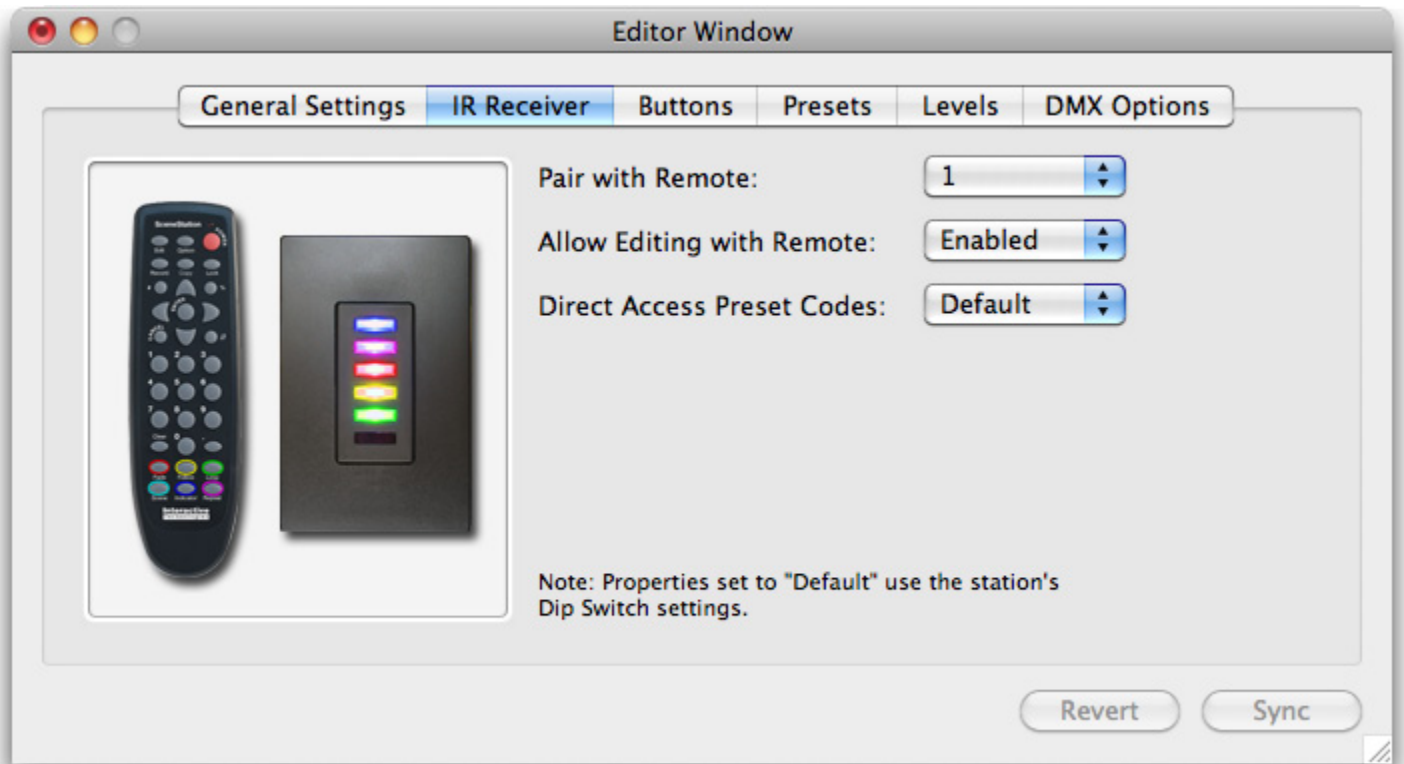

Pair with Remote

The Pair with Remote setting is used to specify which remote control should be paired with this station.

The standard SceneStation Programmer's Remote has the ability to be set to one of six different codes. Choose the desired code number with this popup menu.

Choose Default to use the IR Remote Code as chosen by the DIP Switches on the back of the station.

Allow Editing with Remote

If this option is enabled, the Programmer's Remote can be used to make changes to the program in the station's memory.

If this option is disabled, programming with the Programmer's Remote is disabled.

Choose Default to use the option as chosen by the DIP Switch on the back of the station.


Direct Access Preset Codes

If this option is enabled, the station will receive the special “Direct Access Preset Codes”. These are special IR codes that provide direct access to all 64 presets, each with a single IR code.

Choose Default to use the option as chosen by the DIP Switch on the back of the station.

Buttons


The Buttons tab of the station editor window is used to program the functions of each of the station's buttons:

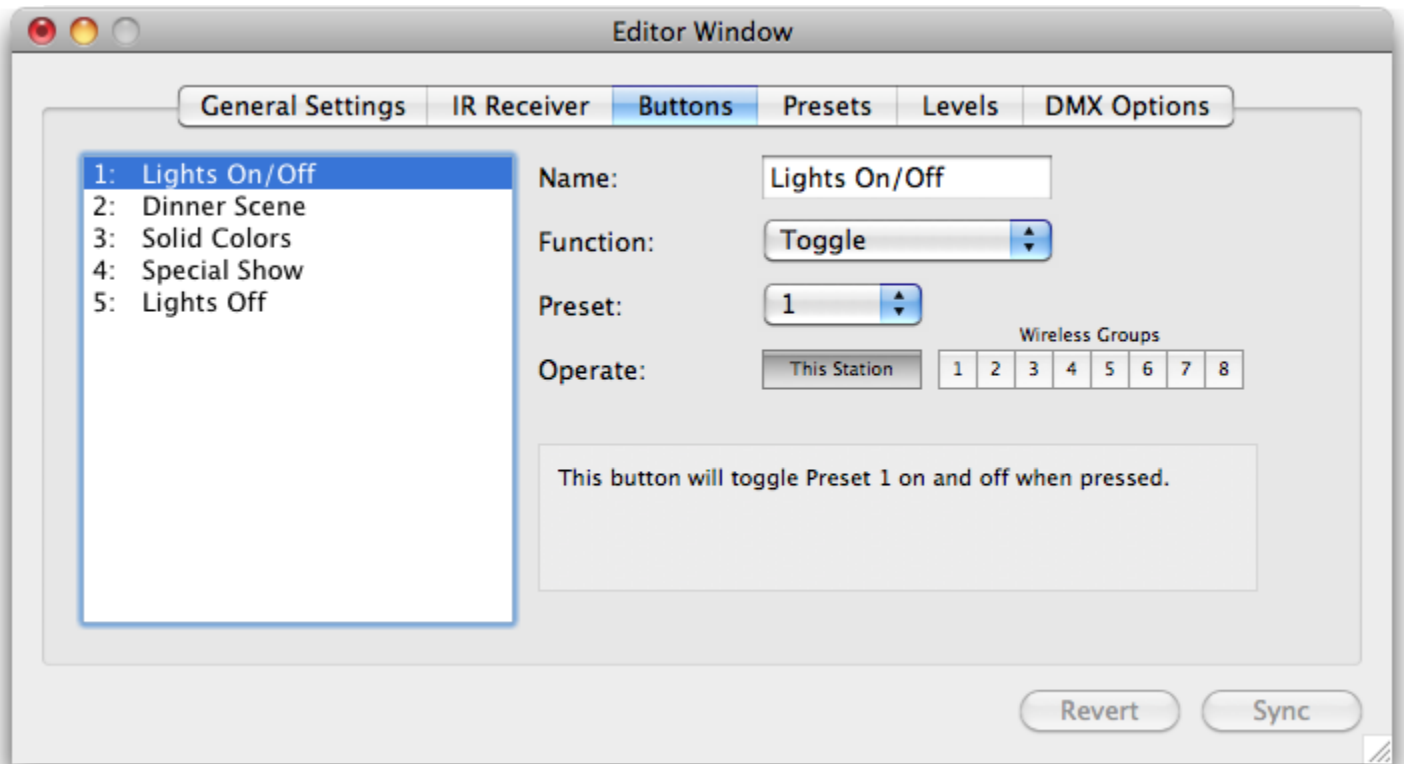

Button List


On the left side of this window is a list of the buttons available on this station. Select a button to edit its parameters.

Name



This field is the button's name. It is for your convenience to provide a descriptive label of what the button's function may be.


Function



This popup menu selects the button's primary function. Choose from one of the following options:


- **None** - The button will not do anything when pressed.
- **Normal** - The button will activate its preset.
- **Toggle** - The button will toggle the specified preset on and off. If the button is not active, a press will activate the preset. If the button is active, a press will deactivate the preset.
- **Sequential** - The button will activate the specified preset when pressed. Then, while the button is active, each additional press will step manually from the current preset to the next preset. This function follows the normal sequence of presets on each press, including loops and repeat counts. This function is useful for making a single button able to select one of several different presets.
- **Latched** - The button will activate the specified preset only if the button is not currently active. This function is useful for making sure that a second press of a button doesn't restart a chase or loop of presets.
- **Momentary** - The button will activate the specified preset only for as long as the button is held down. When the button is released, the station will return to the previous preset that was active.
- **Pile-On Toggle** - The button will toggle the specified preset on and off as a special "pile-on" overlay on top of the main preset that may also be active. Scenes are output from SceneStation by combining the channel levels of the primary preset and all active Pile-On presets by using a "highest-level-takes-precedence" strategy on each DMX channel. More than one Pile-On preset may be active at the same time (offering up to 64 simultaneous Pile-Ons).

Preset



This popup menu selects which preset the button function activates.

Operate



This group of controls specify what stations this button operates. Normally, the “**This Station**” control is selected. When “**This Station**” is chosen, the button operates the station that the button is physically located.


When you want a button to wirelessly send it’s function to another station, chose one or more of the Wireless Groups options. For instance, if you want a button to wirelessly operate another station that’s listening to Group 3, then select “**3**”.

When a button is operating a preset on another station, the LED indicator of this button will provide the feedback provided by the remote station.

Typically, if a button is wirelessly triggering another station, the “**This Station**” control should not be selected, since you want the button to operate only another station. However, in some cases it may be desirable to have a single button press activate a preset on this station as well as to send the event to other wireless stations.

Presets

The Presets tab of the station editor window is used to set up each of the station's presets:

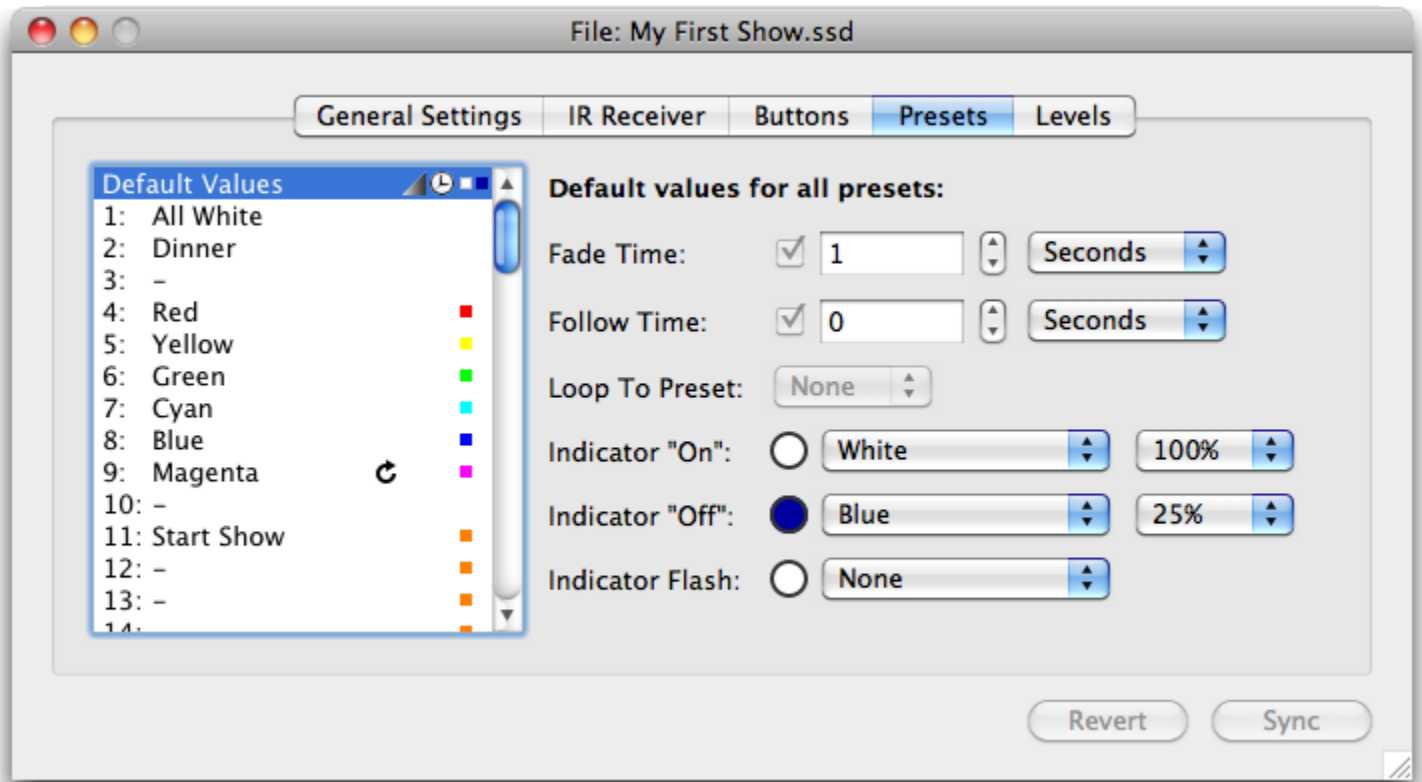


Preset List

On the left side of this window is a list of the presets available on this station. Select a preset to edit its parameters.


When editing the presets for a live station that is wirelessly connected to SceneStation Studio, the station will output the DMX scene that is currently selected in the Preset List.

The first item in the list is a special option named "Default Values". Choose this preset to edit the default values for the parameters of each preset.



Each preset in the list displays icons on its right side that indicates if that preset specifies its own loop, fade time, follow time or indicator colors instead of using the default values for those properties.

Name



This field is the preset's name. It is for your convenience to provide a descriptive label on what the preset's purpose may be.

Note that there is no name field for the Default Values option.

Fade Time



A preset's Fade Time is the amount of time it takes to crossfade to a new scene when this preset is activated.

To use the default fade time, the check mark should be not checked.


To use a custom fade time for the preset, the check mark should be checked.

In the text field, enter the fade time along with choosing the desired units (Seconds, Minutes or Hours) from the popup menu. Any amount of time from 0.01 seconds up to 24 hours may be specified.

To cause a preset to appear immediately (with no fade time), specify a fade time of zero (0).


SceneStation also supports "Split Fade Times". A Split Fade Time is actually two fade times, one time that is used for channels that are increasing in value and another time used for channels that are decreasing in value. This feature can allow a preset to appear quickly while the previous preset appears to fade out slowly. Other special effects can be created using this technique.

To enter a Split Fade Time, put two times in the field, separated by a slash ("/"). For example:



In this example, when the preset is activated, the channels coming in will fade up in 1.5 seconds, while the channels from the previous preset will fade out in 5 seconds.

Follow Time




A preset's Follow Time is the length of time after a preset is activated that the next preset will automatically activate. Use the follow time property to make presets automatically step from one to the next.

In the text field, enter the follow time along with choosing the desired units (Seconds, Minutes or Hours) from the popup menu. Any amount of time from 0.01 seconds up to 24 hours may be specified.

In the example above, the preset will automatically activate the next preset 10 seconds after this preset is activated.

Presets can follow each other in a simple sequential manner, or follow times can be combined with the Loop To Preset property to create loops.


Loop To Preset



Normally, when stepping from preset to preset (either manually with a Sequential button or automatically with a follow time), presets step in numerical order (such as 1, 2, 3, 4, 5, etc.).


The Loop To Preset property allows a preset to specify that a different preset should come after this one.

For example, to create a short loop that causes presets to execute in the order 1, 2, 3, 4, 1, 2, 3, 4, 1, 2, 3, 4, etc., then preset 4 should have a Loop back to preset 1.



When a loop has been selected, a second popup menu appears allowing a number of times that the loop should be repeated to be specified. By default a loop always occurs.

You can choose to have a loop only occur from between 1 and 255 times using this menu.



For example, if preset 3 loops back to preset 1, and the loop is active for 2 times, then the station will execute the presets in the order 1, 2, 3, 1, 2, 3, 1, 2, 3, 4, 5, etc.

Indicator Options

Indicator "On":		Red	100%
Indicator "Off":		Blue	25%
Indicator Flash:		None	

Each preset specifies how the LED Indicator in the button should appear when a button is displaying the preset.

The LED Indicator is defined by an “On” color, which is the color of the button when the preset is active, an “Off” color, which is the color of the button when the preset is not active and a “Flash Pattern”, which is one of several different flashing patterns for when the preset is active.

Use the popup menus to select one of many different colors for the “On” and “Off” states of the preset. Additional popup menus are used to choose the intensity level of the indicator.


A final popup menu is available to choose an optional flashing pattern for the indicator when the preset is active. Choices include Slow, Medium, Fast and Wink.

Each preset can specify its own indicator colors or use the default colors by choosing Default from the corresponding popup menus.

Note: The reason that the preset specifies the button colors and not the button is that in SceneStation, several button types dynamically change which preset the button is logically displaying at any given time. For instance, when running a chase pattern, the button indicator can change color for each step in the chase. Or, when a button is set to manually step through several presets, the button color can change each time a new preset is chosen to provide feedback to the user.

Levels

The Levels tab of the station editor window is used to view and/or modify each of the preset's DMX channel values:

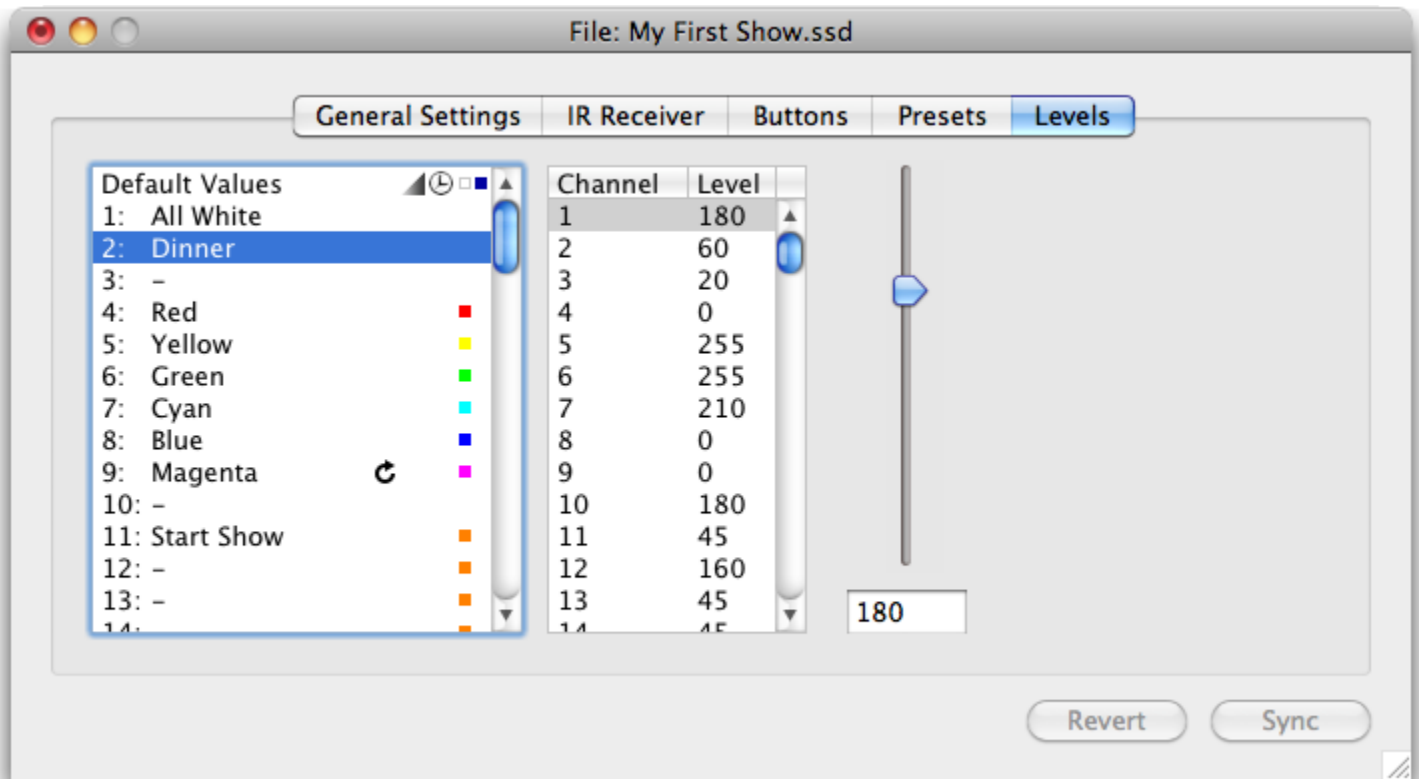

Preset List

On the left side of this window is a list of the presets available on this station. Select a preset to edit its levels.

When editing the presets for a live station that is wirelessly connected to SceneStation Studio, the station will output the DMX scene that is currently selected in the Preset List.

Channel List


Next to the preset list is a list of DMX channels and their values for each preset. Once a preset is selected, this list can be used to select a DMX channel to edit.

DMX Slider

On the right side of the window is a slider and a text field that is used to change DMX values for the selected channel.

DMX Options


The DMX Options tab of the station editor window is used to change the preferences for what the station should do when it receives DMX from another source, or when it begins outputting DMX again after the external DMX source is removed:

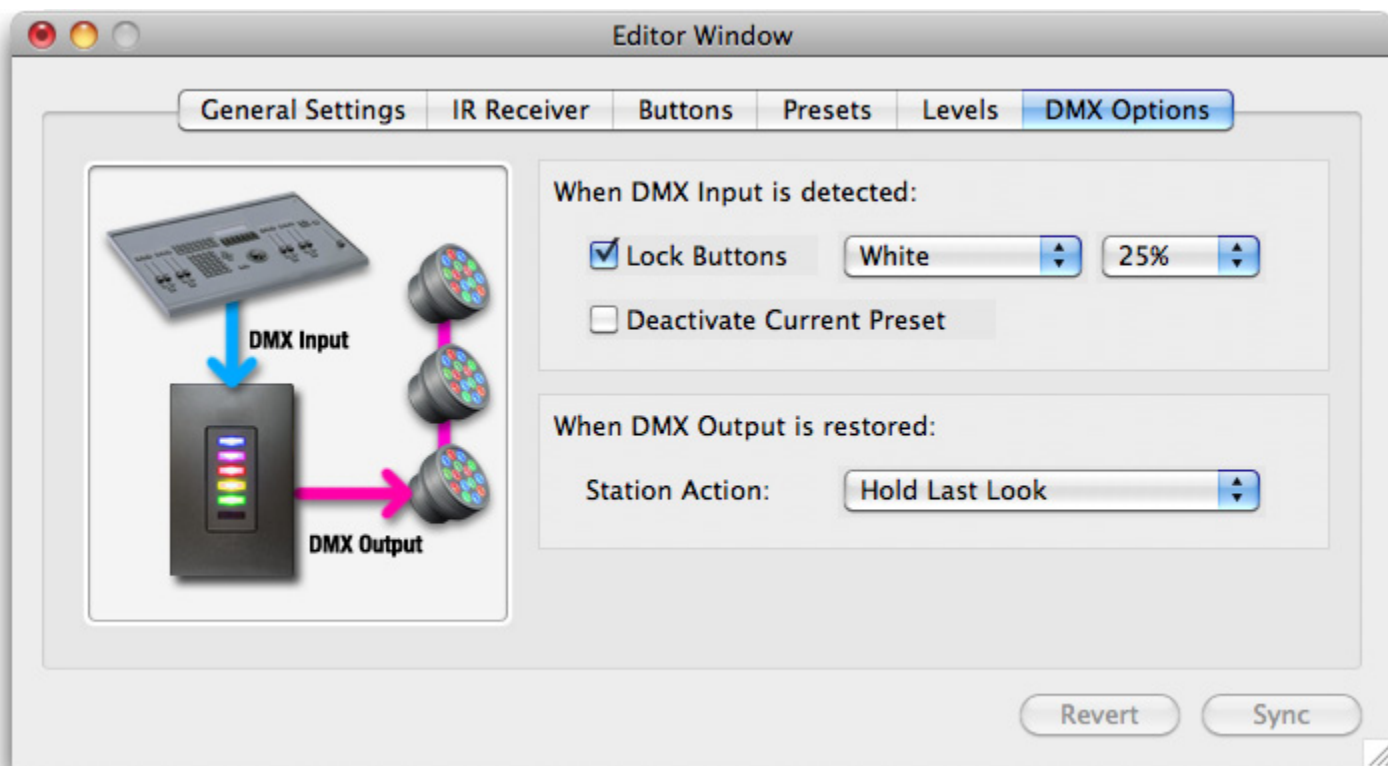

When DMX Input is Detected

The chosen actions in this group are taken whenever the station detects that another source of DMX has become active on the DMX link. The station always stops outputting its own DMX signal, but it can be programmed to take additional actions.

The first of two things the station can do is to lock out the front-panel buttons on the station. The following controls enable the button lock and to choose the color and brightness of the buttons that should be displayed on the station while the buttons are locked:



The second DMX Input action the station can take is to deactivate the current preset. The station will be allowing the external console to pass-thru, but when the external DMX signal is lost and the station resumes outputting DMX, no preset will be active.

Deactivate Current Preset

When DMX Output is Restored

The action to be taken when an external console stops outputting DMX and the station regains control of the DMX line is chosen in this group:


Station Action:

Available DMX Output Restore options include:

- **Hold Last Look** - The station will remember the very last scene that the external controller was outputting and the station will continue to output this captured scene. This scene can be different from any scene that is stored in the station's internal memory. As soon as the user presses a button on the station, the station will crossfade from the held scene to the chosen scene.
- **Snap to Current Preset** - The station will immediately begin outputting the scene that is currently selected on the station. No crossfade will be performed.
- **Fade to Current Preset** - The station will temporarily capture the last scene from the external controller and then immediately begin crossfading to the currently selected scene on the station.
- **Fade to Black** - The station will temporarily capture the last scene from the external controller and then immediately begin fading all channels to zero (black). The station uses the default fade time to perform the fade out.
- **Activate Preset (x)** - The station will temporarily capture the last scene from the external controller and then immediately activate the chosen preset. The station will crossfade (if the preset has a fade time) to the newly activated scene.

Using the Programmer's Remote

The SceneStation Programmer's Remote can both operate the station (by activating presets and adjusting the grandmaster) in a Playback Mode and can be used to program the station using an Edit Mode.

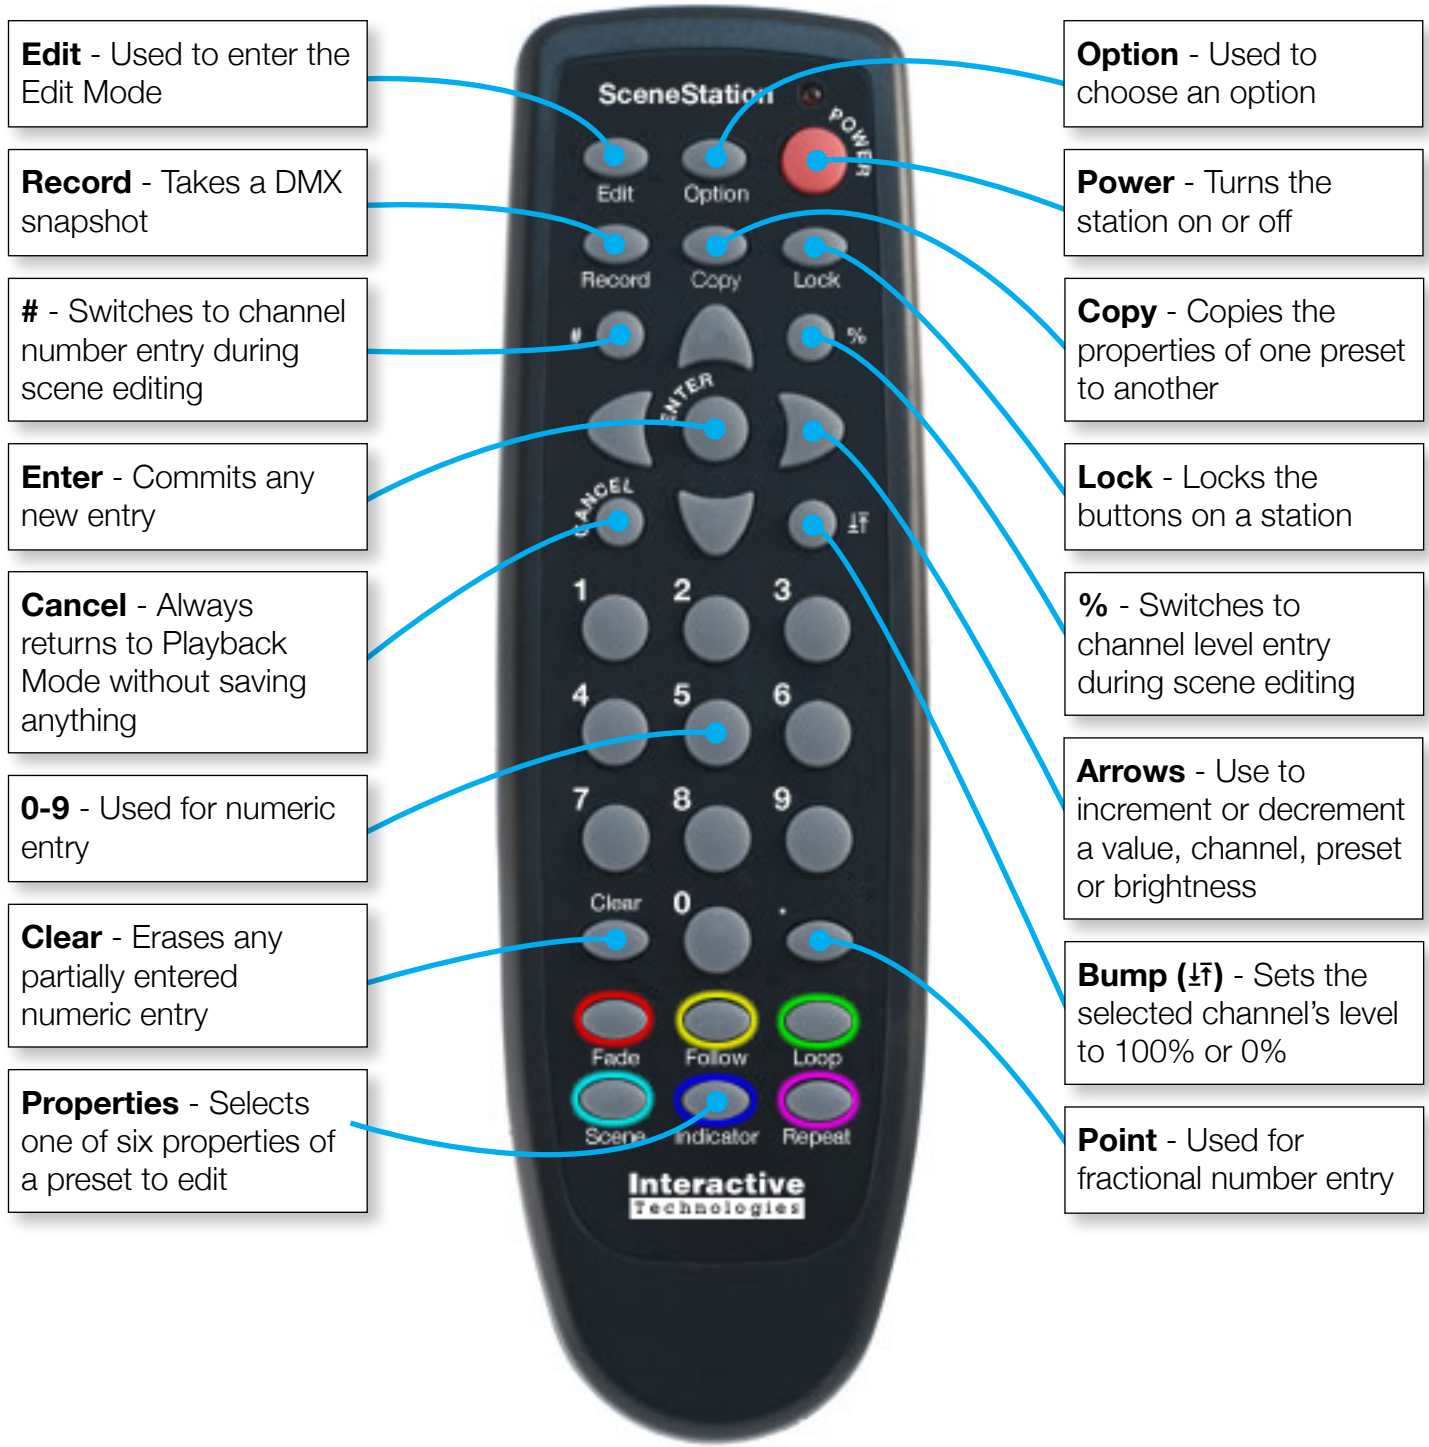

Playback Mode

A SceneStation is normally functioning in its Playback Mode. When in this mode, the station is expecting to execute presets when a button is pressed on its front panel, or via a wireless command or by receiving infrared commands. Also, the LED indicators behind each button shows the status of each preset by displaying the programmed LED colors.

Press **CANCEL** at any time to return to playback mode. If any editing was in progress or information was partially entered, all changes are cancelled.

Activating Presets

While a SceneStation is in its normal playback mode, press the two-digit number of a preset to activate.

For example, to activate Preset 12, press **1** then **2**.

Presets 0 through 9 can be activated by entering a zero first to make the preset a two-digit number.

For example, to activate Preset 1, press **0** then **1**.

Another option for single-digit presets is to press the preset number and then **ENTER**.

For example, to activate Preset 3, press **3** then **ENTER**.

Adjusting the Grandmaster

The station's "Grandmaster" is the overall intensity level of the DMX channel values being output from the station. The Grandmaster can be adjusted from 0 to 100%. Normally, the Grandmaster is set to 100%. When a level lower than 100% is chosen, all of the DMX channel values are scaled down by that percentage before being output by the station.

To adjust the Grandmaster, press the **UP** and/or **DOWN** buttons.

When adjusting upwards and the Grandmaster is already at 100% or when adjusting downwards and the Grandmaster is already at 0%, all of the LEDs on the station will briefly flash Red, showing that the limit has been reached.

Note: If the Grandmaster feature of the station has been disabled, all of the LEDs will flash Red when attempting to raise or lower the Grandmaster.

Stepping Through Presets

Press the **RIGHT** arrow button to step to the next preset. The next preset that the station will activate will honor the Loop and Repeat properties on each preset in the list.

Press the **LEFT** arrow button to step to the previous preset. The previous preset is always the preset that has a number one less than the current preset.

Locking Station Buttons

To lock the front-panel buttons on a station, press the **LOCK** button.

The odd-numbered LEDs on the station will briefly flash Red when the buttons are locked.

To unlock the front-panel buttons on a station, press the **LOCK** button a second time.

The odd-numbered LEDs on the station will briefly flash Green when the buttons are unlocked.

If the user presses a front-panel button on the station while the buttons are locked, all LEDs on the station will flash Red to show that the station is locked, and no action will be performed.

Preset Edit Mode

The Preset Edit Mode is used to edit the properties of a preset. The properties of a preset include its Scene, Fade Time, Follow Time, Loop, Repeat and Indicator properties.

To enter the Preset Edit mode, press:

EDIT + (*two-digit scene number*)

The center LED on the station will begin to blink one of five different colors. The color of the center LED indicates which of the properties is being edited:

Fade Time	=	Red
Follow Time	=	Yellow
Loop To	=	Green
Scene	=	Cyan
Repeat	=	Magenta
Indicator	=	(see below)

To select which property of a preset is being modified, press one of the six property buttons at the bottom of the remote:

FADE, FOLLOW, LOOP, SCENE, INDICATOR or **REPEAT**

By default, the Scene property is selected (Cyan) when the Edit Mode is first entered.

After editing a property, a different property button can be pressed to change more than one property at a time.

After changes are made, press the **ENTER** button to save the changes.

To cancel changes, press the **CANCEL** button.

The following sections describe in detail how to edit each of the properties.

Edit Scene

Press the **SCENE** button to switch to the Scene Edit mode. The center LED on the station will blink Cyan (the same color as the Scene button on the remote).

While in the Scene Edit mode, you can adjust the DMX values of each of the channels being out by the station for this preset. While editing the scene, the station will output the changes being made to the scene so you can preview the scene's look on the fixtures connected to the station.



Use the **UP** and **DOWN** arrow buttons to raise and lower the current DMX channel (when first entering the Scene Edit mode, channel 1 will be the current channel).

Use the **RIGHT** and **LEFT** arrow buttons to step to the next or previous channel.

To quickly bump the current channel's level to 100% or back to 0%, press the **BUMP** (↕) button.

To jump to a specific channel, press the **CHANNEL (#)** button, followed by the three-digit channel number (001 to 512).

To enter a specific percentage level for a channel, press the **LEVEL (%)** button, followed by the two-digit percentage level (00 to 99). To enter 100%, press the decimal point (.).

When finished setting the Scene property of a preset, you can either press **ENTER** to save the changes and return to the station's Idle Mode, or you can press a different property button (Fade, Follow, Loop, Repeat, etc.) to enter the value of another property.

Note: You can also capture scenes by recording the DMX channels from the station's DMX Input. Do do this, see the section on Recording DMX Snapshots.

Edit Fade Time

A preset's Fade Time is the amount of time it takes to crossfade to a new scene when this preset is activated.

Press the **FADE** button to switch to the Fade Time mode. The center LED on the station will blink Red (the same color as the Scene button on the remote).

Then, enter the number of seconds to set the Fade Time to.

For example, the following sequence sets the preset's fade time to 15 seconds:

FADE + 15

Fade Times can be entered between 0.01 and 86,400 seconds (1/100th of a second to 24 hours).

To have the preset's scene appear without any fade time, enter zero (0). For example:

FADE + 0

To clear the fade time of a preset so that the preset will use the default fade time, press:

FADE + CLEAR

SceneStation also supports "Split Fade Times". A Split Fade Time is actually two fade times, one time that is used for channels that are increasing in value and another time used for channels that are decreasing in value. This feature can allow a preset to appear quickly while the previous preset appears to fade out slowly. Other special effects can be created using this technique.

To enter a Split Fade Time, press **OPTION** between the two times. For example, the following sequence sets the preset's fade time to a 3.5 second "up" time and a 7 second "down" time:

FADE + 3.5 + OPTION + 7

In this example, when the preset is activated, the channels coming in will fade up in 3.5 seconds, while the channels from the previous preset will fade out in 7 seconds.

When finished setting the Fade Time property of a preset, you can either press **ENTER** to save the changes and return to the station's Idle Mode, or you can press a different property button (Fade, Follow, Loop, Repeat, etc.) to enter the value of another property.



Edit Follow Time

A preset's Follow Time is the length of time after a preset is activated that the next preset will automatically activate. Use the follow time property to make presets automatically step from one to the next.

Press the **FOLLOW** button to switch to the Follow Time mode. The center LED on the station will blink Yellow (the same color as the Scene button on the remote).



Then, enter the number of seconds to set the Follow Time to.

For example, the following sequence sets the preset's follow time to 30 seconds:

FOLLOW + 30

In the example above, the preset will automatically activate the next preset 30 seconds after this preset is activated.

Presets can follow each other in a simple sequential manner, or follow times can be combined with the Loop To Preset property to create loops.

Follow Times can be entered between 0.01 and 86,400 seconds (1/100th of a second to 24 hours).

To remove a follow time from a preset, enter zero (0). For example:

FOLLOW + 0

To clear the follow time of a preset so that the preset will use the default follow time, press:

FOLLOW + CLEAR

When finished setting the Follow Time property of a preset, you can either press **ENTER** to save the changes and return to the station's Idle Mode, or you can press a different property button (Fade, Follow, Loop, Repeat, etc.) to enter the value of another property.

Edit Loop to Preset

Normally, when stepping from preset to preset (either manually with a Sequential button or automatically with a follow time), presets step in numerical order (such as 1, 2, 3, 4, 5, etc.).

The Loop To Preset property allows a preset to specify that a different preset should come after this one.



Press the **LOOP** button to switch to the Loop to Preset mode. The center LED on the station will blink Green (the same color as the Scene button on the remote).

Then, press the number of the preset you want this preset to loop to.

For example, to create a short loop that causes presets to execute in the order 1, 2, 3, 4, 1, 2, 3, 4, 1, 2, 3, 4, etc., then preset 4 should have a Loop back to preset 1. While editing preset 4, press:

LOOP + 1

To remove a loop from a preset, enter zero (0). For example:

LOOP + 0

When finished setting the Loop property of a preset, you can either press **ENTER** to save the changes and return to the station's Idle Mode, or you can press a different property button (Fade, Follow, Loop, Repeat, etc.) to enter the value of another property.

Edit Repeat Count

When a preset has a loop back to another preset, you can specify that the loop should only occur a specific number of times. By default, loops repeat always.

Press the **REPEAT** button to switch to the Repeat Count mode. The center LED on the station will blink Magenta (the same color as the Scene button on the remote).

Then, press the number of times you want the loop to be taken. You can enter a repeat count from 0 to 255. A repeat count of zero will cause the loop to always be taken.


For example, to create a short loop that causes presets to execute in the order 1, 2, 3, 1, 2, 3, 1, 2, 3, 4, 5, etc., then preset 3 should have a loop back to preset 1 and a repeat count of 2. While editing preset 3, press:

REPEAT + 2

To remove a repeat count from a preset (causing the loop to repeat infinitely), enter zero (0). For example:

REPEAT + 0

When finished setting the Repeat property of a preset, you can either press **ENTER** to save the changes and return to the station's Idle Mode, or you can press a different property button (Fade, Follow, Loop, Repeat, etc.) to enter the value of another property.

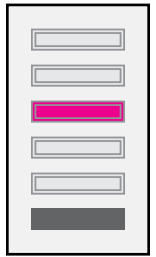

Edit LED Indicators

Each preset contains information for the colors the LED indicator should appear when the preset is either active or inactive on a button.

Press the **INDICATOR** button to switch to the Edit Indicator mode. In this mode, three LEDs will illuminate, showing the various states of the indicator.

The Top LED shows the “Active” color of the preset, the Center LED shows the “Inactive” color of the preset and the Bottom LED shows the flashing pattern (if selected) of the preset.

When you enter the Edit Indicator mode, you will be editing the Active Color.

Use the **RIGHT** and **LEFT** arrow buttons to change the color of the indicator. There are 20 colors to choose from.

Use the **UP** and **DOWN** arrow buttons to raise and lower the brightness of the color. There are 4 brightness levels for each of the 20 colors.

To change between button states, use the number buttons **1**, **2** and **3**:


Press **1** to switch to editing the Active Color.

Press **2** to switch to editing the Inactive Color.

Press **3** to switch to editing the Flash Pattern.

While editing the Flash Pattern, the arrow buttons select one of five different flash patterns: Slow, Medium, Fast, Wink and None.

When finished setting the Indicator property of a preset, you can either press **ENTER** to save the changes and return to the station’s Idle Mode, or you can press a different property button (Fade, Follow, Loop, Repeat, etc.) to enter the value of another property.

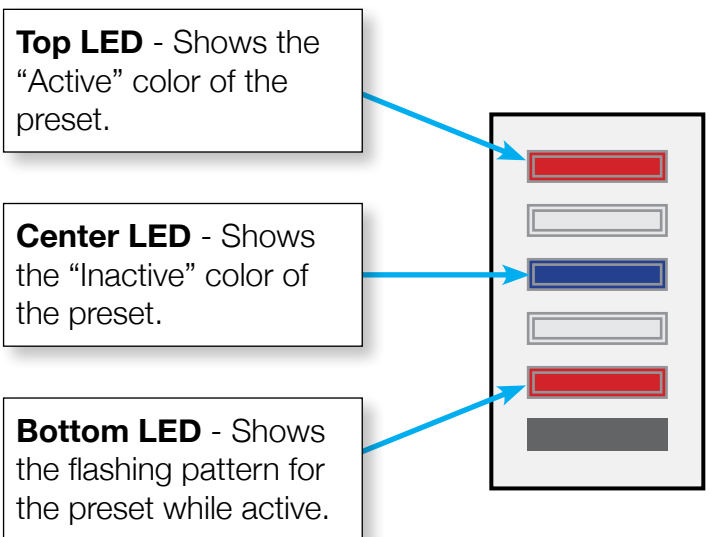

Copy Preset

While editing a preset, you can copy the properties of one preset to the preset you are currently editing.

Press the **COPY** button to temporarily switch to the Copy Preset mode. The center LED on the station will blink White.

Then, enter the two-digit number of the preset you want to copy the data from.

All of the properties of the specified preset (the scene, fade and follow times, loop and repeat and indicator colors) will be copied to the current preset.

After copying the information, the preset is not saved yet. The station remains in the Preset Edit mode so you can edit any of the properties before they're saved. Press **ENTER** to save the copied preset and/or your changes. Press **CLEAR** to cancel the changes and return to the Idle Mode.

For example, while editing preset 15 you decide that you want to copy the information from preset 8. Press:

COPY + 8

The station will copy the data from preset 8 into the edit mode.

Then, you want to change the fade time to 3 seconds. Press:

FADE + 3

You can adjust other properties as well. When finished making changes, press **ENTER** to save all of the changes. In this example, preset 15 will be equal to preset 8, but have a fade time of 3 seconds.



Button Edit Mode

The Button Edit Mode is used to edit the properties of a button. The properties of a button include its function and the preset it activates.

The following sections describe how to edit the various properties of a button.

Set a Button's Preset

Each button activates a preset. To change the preset that a button activates, begin by pressing **EDIT**, and then press the physical button you want to change.

The button on the station you are editing will quickly flash White.

Then, press the two-digit number of the preset you want the button to activate (from 00 to 64).

The button will now activate the specified preset and the station returns to the Idle Mode.



Set a Button's Function

Each button uses its Button Function to determine how it will activate a preset. To change the function of a button, begin by pressing **EDIT**, and then press the physical button you want to change.

The button on the station you are editing will quickly flash White.

Next, press **OPTION** to switch to the Button Function mode. The button will begin to quickly flash Yellow.

Finally, press one of the digits below to change the button's function:

- **1 = Normal** - The button will activate its preset.
- **2 = Toggle** - The button will toggle the specified preset on and off. If the button is not active, a press will activate the preset. If the button is active, a press will deactivate the preset.
- **3 = Sequential** - The button will activate the specified preset when pressed. Then, while the button is active, each additional press will step manually from the current preset to the next preset. This function follows the normal sequence of presets on each press, including loops and repeat counts. This function is useful for making a single button able to select one of several different presets.
- **4 = Latched** - The button will activate the specified preset only if the button is not currently active. This function is useful for making sure that a second press of a button doesn't restart a chase or loop of presets.



- **5 = Momentary** - The button will activate the specified preset only for as long as the button is held down. When the button is released, the station will return to the previous preset that was active.
- **6 = Pile-On Toggle** - The button will toggle the specified preset on and off as a special “pile-on” overlay on top of the main preset that may also be active. Scenes are output from SceneStation by combining the channel levels of the primary preset and all active Pile-On presets by using a “highest-level-takes-precedence” strategy on each DMX channel. More than one Pile-On preset may be active at the same time (offering up to 64 simultaneous Pile-Ons).
- **0 = None** - The button will not do anything when pressed.

DMX Record Mode

This mode is used to capture the DMX channel levels of an external source, such as a lighting console or controller and store these levels into one of the 64 presets in SceneStation.

Record a DMX Snapshot

When an external DMX source is controlling the lighting fixtures, the current scene can be captured into one of the 64 preset memories in SceneStation.

To enter the DMX Record mode, press **RECORD**. The even-numbered LEDs on the station will begin blinking Green.

If no DMX input is detected, all LEDs will briefly flash Red.

Then, enter the two-digit preset number to record the current DMX channel values into.


For example, to record the incoming DMX values into Preset 3, press:

RECORD + 03

When the scene is successfully recorded, all LEDs on the station will briefly flash Green.

The station is now ready to record another snapshot. You can adjust the levels of the lighting fixtures and enter the two-digit preset number to record another snapshot.

When finished recording scenes, press **CANCEL**.

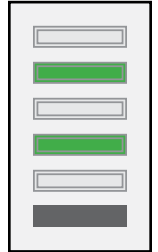

Note: When recording scenes in this manner, the other properties of the preset (such as Fade, Follow, Loop, Repeat, etc.) are **not modified** from their previous values. To change these properties, use the Preset Edit Mode as described earlier.

Station Options

There are several global station options that can be modified to customize the operation of the station.

To change one of the following options, press:

EDIT + OPTION + *(three-digit option number)*

The listings below describe each of the available options in detail.

900: Startup Preset

When a SceneStation is powered on, it can automatically activate a preset.

When editing this option, enter the two-digit preset number you want the station to activate upon receiving power.

To disable this feature, enter preset number “00”.

901: Wireless PIN

Stations that have the optional 2.4 GHz wireless option can use a four-digit PIN number for added security. If enabled, this PIN number is required to access the station’s programming from the SceneStation Studio software and also for allowing stations to remotely activate presets on other stations.

When editing this option, enter the four-digit PIN number you want to assign to the station.

All stations part of the same wireless group must have the same PIN number.

To remove the PIN number, enter “0000”.

902: Grandmaster Enable

The Grandmaster feature of the station can be enabled or disabled by this setting.

To enable the Grandmaster, enter “1”.

To disable the Grandmaster, enter “0”.

903: Lock Buttons

The Lock Buttons during DMX Input feature can be enabled or disabled and the color to be displayed on the station while locked can be adjusted by this setting.

After entering the 903 code, the station will display the selected color of the Lock Buttons func-

tion (if set) or the display will be all black if not set.

Use the Up, Down, Right and Left buttons to choose a color and intensity for the Lock Buttons function. Then, press Enter to store the color and enable the feature.

To disable the feature, press Clear and then press Enter.

904: Deselect Preset

The Deselect Preset during DMX Input feature can be enabled or disabled by this setting:

To enable the Deselect Preset function, press “1”.

To disable the Deselect Preset function, press “0”.

905: DMX Output Restore

The action taken when the station’s DMX Output is restored is chosen using this setting:

To have the station Fade to Black, enter “00”.

To have the station Activate a Preset, enter the two-digit preset number of the desired preset, for example “07”.

To have the station Snap to the Current Preset, enter “97”.

To have the station Fade to the Current Preset, enter “98”.

To have the station Hold the Last Scene from the external console, enter “99”.

961: Display Firmware Version

When selected, this option displays the station’s Firmware Version using the LED indicators on each of the buttons.

See the Determining Firmware Version appendix for details.

962: Enter Self-Test Mode

When this option is selected, the station enters its “Self Test Mode”.

See the Self Test Mode appendix for details.

981: Recall Built-In Show 1

When this option is chosen, the **station's memory is erased** and a built-in show is loaded into memory. "Show 1" is a test show that has each preset programmed with a single DMX channel set to 100%. Preset 1 has Channel 1 at 100%. Preset 2 has Channel 2 at 100%, etc.

This operation cannot be undone.

982: Recall Built-In Show 2

When this option is chosen, the **station's memory is erased** and a built-in show is loaded into memory. "Show 2" is a demonstration show that is set up for running RGB LED fixtures. Each button on the station has a different behavior.

This operation cannot be undone.

989: Erase Memory

When this option is chosen, the **station's memory is erased** and the station is returned to its "Factory Default" state.

This operation cannot be undone.

Programming Examples

This chapter provides step-by-step instructions of how to program a wide variety of typical scenarios into a SceneStation.

You can use these examples when programming a SceneStation with either the SceneStation Studio software or with the Programmer's IR Remote.

- Example 1: Create a Preset
- Example 2: Assign a Preset to a Button
- Example 3: Set Timing Parameters for a Preset
- Example 4: Program a Button to Toggle a Preset
- Example 5: Create a Loop
- Example 6: Change the Indicator Color for a Preset
- Example 7: Program a Button to Activate Multiple Presets

Example 1: Create a Preset

This example demonstrates how to program a preset, including the preset's channel values (scene) and fade time.

The following procedure will program a single preset with a scene and a 2 second fade time:

Action	Using SceneStation Studio	Using the Programmer's Remote
Select the Preset to be used. In this example, we'll use Preset 1.	Open the station editor window and click the Presets tab. Then, click on Preset 1 in the list.	Press EDIT , and then the two-digit Preset number, " 01 ".
Adjust the scene (DMX channels).	Switch to the Levels tab and adjust the Preset's levels using the list of channels, slider and text entry fields.	Press SCENE to enter the Scene Edit mode. Then, use the UP , DOWN , RIGHT , LEFT and BUMP buttons to select channels and raise and lower their levels. The CHANNEL and LEVEL buttons can be used to directly input level data also.
Set the Fade Time.	Switch back to the Presets tab. Then enter the time into the Fade Time field. In this example, enter 2 and choose "Seconds" in the pop-up menu.	Press FADE , then enter the desired Fade Time in seconds. In this example, enter " 2 ".
Store the changes.	Click on the Sync button to send the changes to the station, or use the File > Save menu to save the changes to a file.	Press ENTER to save the Preset after adjusting the Preset's properties.

After this procedure is complete, Preset 1 will have some channel levels and a fade time of 2 seconds.

The next example demonstrates how to assign this preset to a button.

Or, you can activate this preset by pressing "**01**" on the IR Remote.

Example 2: Assign a Preset to a Button

This example demonstrates how to program a button to activate a preset.

The following procedure will program Button 1 on the station to activate Preset 1 with the “normal” function mode of the button.

Action	Using SceneStation Studio	Using the Programmer's Remote
Select the Button to be programmed. In this example, we'll use Button 1.	Switch to the Buttons tab. Then, click on Button 1 in the list.	Press EDIT , and then press the physical button you want to program. The button will quickly flash White.
Enter the preset number of the Preset you want this button to activate (Preset 1 in this example).	Choose “Preset 1” from the Preset pop-up menu.	Enter the two-digit preset number, “ 01 ”.
Change the Button Function to “Normal”.	Choose “Normal” from the Function pop-up menu.	Press EDIT followed by the physical button again. Next, press OPTION + 1 to set the Function to “Normal”.
Store the changes.	Click on the Sync button to send the changes to the station, or use the File > Save menu to save the changes to a file.	N/A

After this procedure is complete, a press of Button 1 on the station will activate Preset 1. The “Normal” button function simply makes the button activate the preset.

Example 3: Set Timing Parameters for a Preset

This example demonstrates how to change the timing parameters for a preset.

The following procedure will modify Preset 1 to have a 3.5 second fade time and a 1 minute follow time. This means that when activated, Preset 1 will fade up in 3.5 seconds and 1 minute after being activated the next preset (Preset 2) will automatically activate.

Action	Using SceneStation Studio	Using the Programmer's Remote
Select the Preset to be edited. In this example, we'll edit Preset 1.	Open the station editor window and click the Presets tab. Then, click on Preset 1 in the list.	Press EDIT , and then the two-digit Preset number, " 01 ".
Adjust the Fade Time to 3.5 seconds.	Enter the time into the Fade Time field. You can type a number, or use the Up/Down arrows. Select the time units (Seconds, Minutes or Hours). In this example, enter 3.5 and choose "Seconds" in the pop-up menu.	Press FADE , then enter the desired Fade Time in seconds. In this example, enter " 3.5 ".
Adjust the Follow Time to 1 minute.	Enter the time into the Follow Time field. You can type a number, or use the Up/Down arrows. Select the time units (Seconds, Minutes or Hours). In this example, enter 1 and choose "Minute" in the pop-up menu.	Press FOLLOW , then enter the desired Follow Time in seconds. In this example, enter " 60 ".
Store the changes.	Click on the Sync button to send the changes to the station, or use the File > Save menu to save the changes to a file.	Press ENTER to save the Preset after adjusting the Preset's levels.

After this procedure is complete, press Button 1 on the station (or type "**01**" on the remote) to activate Preset 1. Preset 1's channels will fade up over 3.5 seconds. Also, 10 seconds after activating Preset 1, the next preset (Preset 2) will automatically be activated.

Example 4: Program a Button to Toggle a Preset

This example demonstrates how to create a button that when pressed will toggle a preset on or off. The following procedure will assign Button 2 to toggle Preset 2 on and off:

Action	Using SceneStation Studio	Using the Programmer's Remote
Select the Button to be programmed. In this example, we'll use Button 2.	Switch to the Buttons tab. Then, click on Button 2 in the list.	Press EDIT , and then press the physical button you want to program. The button will quickly flash White.
Enter the preset number of the Preset you want this button to activate (Preset 2 in this example).	Choose "Preset 2" from the Preset pop-up menu.	Enter the two-digit preset number, " 02 ".
Change the Button Function to "Toggle".	Choose "Toggle" from the Function pop-up menu.	Press EDIT followed by the physical button again. Next, press OPTION + 2 to set the Function to "Toggle".
Store the changes.	Click on the Sync button to send the changes to the station, or use the File > Save menu to save the changes to a file.	N/A

After this procedure is complete, press Button 2 on the station to activate Preset 2. When the button is "on", then press Button 2 again. This will toggle Preset 2 back off.

Example 5: Create a Loop

This example demonstrates how to create a loop of several presets.

The following procedure will create a loop out of three presets, numbered 2, 3 and 4. The Follow Times of each preset will be set to have the presets automatically advance every 5 seconds, Fade Times will produce smooth 3 second transitions between presets, and a loop will cause the last preset in the sequence to loop back to the first preset.

Action	Using SceneStation Studio	Using the Programmer's Remote
Select the first Preset to be edited. In this example, we'll edit Preset 2.	Open the station editor window and click the Presets tab. Then, click on Preset 2 in the list.	Press EDIT , and then the two-digit Preset number, " 02 ".
Set the Fade Time to 3 seconds.	Enter the time into the Fade Time field. In this example, enter 3 and choose "Seconds" in the pop-up menu.	Press FADE , then enter the desired Fade Time in seconds. In this example, enter " 3 ".
Set the Follow Time to 5 seconds.	Enter the time into the Follow Time field. In this example, enter 5 and choose "Seconds" in the pop-up menu.	Press FOLLOW , then enter the desired Follow Time in seconds. In this example, enter " 5 ".
Store the changes to Preset 2.	N/A	Press ENTER to save the changes.
Switch to Preset 3.	Click on Preset 3 in the list.	Press EDIT , and then the two-digit Preset number, " 03 ".
Set the Fade Time to 3 seconds.	Enter the time into the Fade Time field. In this example, enter 3 and choose "Seconds" in the pop-up menu.	Press FADE , then enter the desired Fade Time in seconds. In this example, enter " 3 ".
Set the Follow Time to 5 seconds.	Enter the time into the Follow Time field. In this example, enter 5 and choose "Seconds" in the pop-up menu.	Press FOLLOW , then enter the desired Follow Time in seconds. In this example, enter " 5 ".
Store the changes to Preset 3.	N/A	Press ENTER to save the changes.
Switch to Preset 4.	Click on Preset 4 in the list.	Press EDIT , and then the two-digit Preset number, " 04 ".
Set the Fade Time to 3 seconds.	Enter the time into the Fade Time field. In this example, enter 3 and choose "Seconds" in the pop-up menu.	Press FADE , then enter the desired Fade Time in seconds. In this example, enter " 3 ".
Set the Follow Time to 5 seconds.	Enter the time into the Follow Time field. In this example, enter 5 and choose "Seconds" in the pop-up menu.	Press FOLLOW , then enter the desired Follow Time in seconds. In this example, enter " 5 ".
Set the Loop to Preset 2.	Choose Preset 2 in the pop-up menu.	Press LOOP , then enter the preset to loop to. In this example, enter " 2 ".
Store the changes.	Click on the Sync button to send the changes to the station, or use the File > Save menu to save the changes to a file.	Press ENTER to save the Preset after adjusting the Preset's levels.

After this procedure is complete, activate Preset 2 to start the loop. Each preset in the sequence will appear one after another, every 5 seconds.

Example 6: Change the Indicator Color for a Preset

This example demonstrates how to change the “active” and “inactive” indicator colors for a preset and how to add a flashing pattern for the button.

The following procedure will change the indicator colors of Preset 3 to show a bright red color when the preset is active and a dark green color when the preset is inactive. Any button assigned to operate Preset 3 will display these colors. Also, a slow blinking flash pattern will be assigned to the preset, causing the indicator to blink slowly when active.

Action	Using SceneStation Studio	Using the Programmer's Remote
Select the first Preset to be edited. In this example, we'll edit Preset 5.	Open the station editor window and click the Presets tab. Then, click on Preset 5 in the list.	Press EDIT , and enter two-digit Preset number, “05”. Then, press INDICATOR .
Change the preset's “active” color to Bright Red.	Select the color “Red” from the Active Button pop-up menu. Select “100%” from the brightness pop-up menu.	Use the RIGHT and LEFT arrows to select the Red color and use the UP and DOWN arrows to change the brightness to 100%. Note that the top LED on the station shows the active color for the preset.
Change the preset's “inactive” color to Dark Green.	Select the color “Green” from the Inactive Button pop-up menu. Select “25%” from the brightness pop-up menu.	Press “ 2 ” to switch to editing the inactive color. Use the RIGHT and LEFT arrows to select the Green color and use the UP and DOWN arrows to change the brightness to 25%. Note that the center LED on the station shows the inactive color for the preset.
Change the preset's flash pattern to “blinking slowly”.	Select “Slow” from the Button Flash pop-up menu.	Press “ 3 ” to switch to editing the flash pattern. Use the RIGHT and LEFT arrows to select one of several available flashing patterns. Note that the bottom LED on the station shows the flash pattern for the preset.
Store the changes.	Click on the Sync button to send the changes to the station, or use the File > Save menu to save the changes to a file.	Press ENTER to save the Preset after adjusting the Preset's indicator colors.

When this procedure is completed, any button on the station that is displaying the preset will appear with the chosen colors and flash pattern.

Example 7: Program a Button to Activate Multiple Presets

This example demonstrates how to create a button that activates the next preset from a list each time it is pressed.

This example assumes you have several presets such as 10, 11, 12, 13 that you want the button to activate, one at a time with each button press.

The following procedure will first create a loop with these presets by setting Preset 13 to loop back to Preset 10. Then, a button will be assigned to this group with a button mode of “sequential”:

Action	Using SceneStation Studio	Using the Programmer's Remote
Select the last Preset in the group. In this example, we'll edit Preset 13.	Open the station editor window and click the Presets tab. Then, click on Preset 5 in the list.	Press EDIT , and enter two-digit Preset number, “ 13 ”. Then, press LOOP .
Set the Loop to Preset 10.	Choose Preset 10 in the pop-up menu.	Press LOOP , then enter the preset to loop to. In this example, enter “ 10 ”.
Store the changes to Preset 10.	N/A	Press ENTER to save the changes.
Select the Button to be programmed. In this example, we'll use Button 2.	Switch to the Buttons tab. Then, click on Button 2 in the list.	Press EDIT , and then press the physical button you want to program. The button will quickly flash White.
Enter the preset number of the Preset you want this button to activate (Preset 10 in this example).	Choose “Preset 10” from the Preset pop-up menu.	Enter the two-digit preset number, “ 10 ”.
Change the Button Function to “Sequential”.	Choose “Sequential” from the Function pop-up menu.	Press EDIT followed by the physical button again. Next, press OPTION + 3 to set the Function to “Sequential”.
Store the changes.	Click on the Sync button to send the changes to the station, or use the File > Save menu to save the changes to a file.	N/A

When this procedure is complete, the first time you press Button 2, the station will activate Preset 10. A second press of Button 2 will activate Preset 11. Then, Preset 12 and 13. A fifth press of the button will activate Preset 10 again, because of the loop back to Preset 10 from Preset 13.

Appendix A: Pairing The Programmer's Remote

The SceneStation Programmer's Remote can be programmed to output one of six unique remote codes, which enables the pairing of specific remotes with specific stations.

Setting the IR Code on the Remote

To set the IR Code on the Programmer's Remote, follow these simple steps:

- Step 1: Press and hold both the **POWER** and **ENTER** buttons for 3 seconds. The LED on the remote will turn on after 3 seconds. Release the buttons.
- Step 2: Press "**1**" within 3 seconds.
- Step 3: Press one of the property buttons as shown in the following table within 3 seconds:

Desired Code	Property Button
1	SCENE
2	INDICATOR
3	REPEAT
4	FADE
5	FOLLOW
6	LOOP

- Step 4: Press **ENTER**. The LED on the remote will blink twice to confirm that it has accepted the change.

Setting the IR Code on the Station

To set the IR code on the SceneStation, you can either use the SceneStation Studio software or you can set the dip switches on the back of the station.

With the SceneStation Studio software (only available if the station has the wireless option), open the station editor window and click on the IR Receiver tab. Then, choose the desired IR code(s) to respond to by choosing a selection from the Pair With Remote popup menu.

To change the IR code using the dip switches on the back of the station, see the chapter above on Hardware Configuration.

Appendix B: IR Code Specifications

This appendix provides details on the various IR remote control codes used by SceneStation.

SceneStation receives the standard Phillips RC5 IR Protocol transmitted on a carrier frequency of 38KHz.

You can use the information in this appendix for programming universal remote controls or IR emitters for automation systems such as Crestron®, AMX®, Vantage® and others.

SceneStation supports two sets of codes, those transmitted by the SceneStation Programmer's Remote, and a second set of codes for discrete preset activation.

SceneStation Remote

Each button press transmits a 5-bit system code and a six-bit data byte. If the button is held down, this frame is transmitted continuously. Each unique button press transmits a different toggle bit.

The system code can be one of six different user-selectable codes to allow certain remotes to only work with certain stations or to allow for adjusting the remote's system code to not interfere with other nearby devices.

The system code that SceneStation responds to can be set either by adjusting dip switches on the back of the unit or by using the SceneStation Studio software.

The following table shows the possible system codes used by SceneStation:

Dip Switch Setting			Pair With Remote	RC5 System Code(s)
6	7	8		
OFF	OFF	OFF	Remote Code 1	\$1D
OFF	OFF	ON	Remote Code 2	\$1E
OFF	ON	OFF	Remote Code 3	\$1F
OFF	ON	ON	Remote Code 4	\$1A
ON	OFF	OFF	Remote Code 5	\$1B
ON	OFF	ON	Remote Code 6	\$1C
ON	ON	OFF	All Remotes	\$19 through \$1F
ON	ON	ON	No Remotes	None

The following table shows which six-bit data byte is transmitted for each button on the remote. The button definitions in italics are discrete codes not physically accessible on the Programmer's Remote, but are available to send to SceneStation for advanced functionality.

Button	RC5 Data Byte
EDIT	\$00
OPTION	\$01
POWER	\$02
RECORD	\$03
COPY	\$04
LOCK	\$05
CHANNEL	\$06
UP ARROW	\$07
PERCENT	\$08
LEFT ARROW	\$09
ENTER	\$0A
RIGHT ARROW	\$0B
CANCEL	\$0C
DOWN ARROW	\$0D
BUMP	\$0E
1	\$0F
2	\$10
3	\$11
4	\$12
5	\$13
6	\$14

Button	RC5 Data Byte
7	\$15
8	\$16
9	\$17
CLEAR	\$18
0	\$19
DECIMAL	\$1A
FADE	\$1B
FOLLOW	\$1C
LOOP	\$1D
SCENE	\$1E
INDICATOR	\$1F
REPEAT	\$20
<i>MASTER UP</i>	\$2C
<i>MASTER DOWN</i>	\$2D
<i>POWER ON</i>	\$2E
<i>POWER OFF</i>	\$2F
<i>BUTTON 1</i>	\$30
<i>BUTTON 2</i>	\$31
<i>BUTTON 3</i>	\$32
<i>BUTTON 4</i>	\$33
<i>BUTTON 5</i>	\$34

Discrete Preset Activation Codes

An optional set of codes may also be enabled that allows a single IR code to directly activate any of the station's 64 presets.

This feature may be enabled by a dip switch setting on the back of the station or by using the SceneStation Studio software.

Discrete Preset codes use system code \$18.

Then, each preset uses a six-bit data byte that is one less than the desired preset to activate. For example, to activate preset 1, send data byte \$00. To activate preset 2, send data byte \$01. To activate preset 64, send data byte \$3F.

Appendix C: Determining Firmware Version

Sometimes its useful to determine the version of the firmware in a SceneStation. There are two ways to determine the firmware version in a station:

- Use the SceneStation Studio software to display the firmware version
- Display the firmware version on the station LEDs

Viewing the Firmware Version in SceneStation Studio

Simply launch the SceneStation Studio software on your PC or Mac computer with the SceneStation USB dongle attached. All wireless stations within range will appear in the station list, showing the version of firmware for each station.

Displaying the Firmware Version on the stations LEDs

To display the firmware version on a non-wireless station, or without using the SceneStation Studio software, you can trigger the firmware display on the station's LED indicators.

This display can be activated in one of two ways:

- When the station powers up, hold Button 1 down. Continue to hold down this button until after the startup "rainbow pattern" sequence has finished and the station enters the Firmware Version display mode. Button 1 is the farthest from the IR window.
- The Firmware Version display function can be activated at any time using the IR remote. Press **EDIT + OPTION + 961**.

When activated, this option displays the station's Firmware Version using the color of the LED indicators for each of the buttons. The following table shows the color combinations for various firmware versions (Button 1 is the farthest from the IR window):

Firmware Version	Button 1	Button 2	Button 3	Button 4	Button 5
Prior to 2.0.0	<i>(Not available prior to version 2.0.0)</i>				
2.0.0	Yellow	Green	Green	Green	Green
2.0.1	Yellow	Yellow	Green	Green	Green
2.1.0, 2.1.1	Yellow	Green	Yellow	Green	Green
2.1.2	Yellow	Yellow	Yellow	Green	Green

If other combinations of colors appear, you either have a Beta or non-released version of firmware in your station, or you can check for updated versions of this manual.

Press **ENTER** or **CANCEL** on the remote to exit this display mode.

Appendix D: Self Test Mode

SceneStation includes a built-in Self Test function that can help diagnose possible issues with the station's hardware.

The self test tests the following hardware functions:

- LED Button Indicators
- Pushbutton Switches
- DMX Output
- DMX Input
- Infrared (IR) Remote Receiver

Entering the Self Test Mode

There are two ways to enter the Self Test mode:

- When the station powers up, hold Button 2 down. Continue to hold down this button until after the startup “rainbow pattern” sequence has finished and the station enters the Self Test mode. Button 2 is the second-farthest from the IR window.
- The Self Test can be activated at any time using the IR remote. Press **EDIT + OPTION + 962**.

Testing LED Indicators


While the Self Test mode is operating, all five buttons will smoothly cycle through all colors of the rainbow, testing the Red, Green and Blue components of each LED simultaneously.

All buttons should display the same color at the same time.


If any of the LEDs in the buttons has a defective color component, that button will not properly display the same colors as the other buttons.

Note: If an active DMX Input source is attached to the station, the LED Test will not function. See the “Testing DMX Input” section below.

Note: If a button is held (or stuck) down, the LED Test will not behave as expected. See the “Testing Pushbutton Switches” section below.

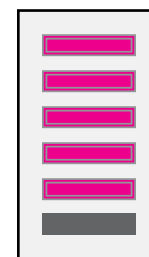

GOOD
All LEDs the Same

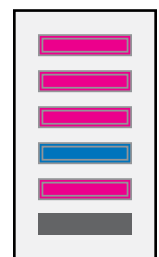

BAD
Button 4 Has No Red

Testing Pushbutton Switches


Whenever any button on the station is pressed, the LEDs on that button switch to Full White while all other LEDs on the station continue to cycle their colors, but at a reduced brightness level.

If a button is not pressed, and the station is showing one or more buttons in White while the other buttons are dimly cycling colors, this means that those buttons may be stuck down or are defective.


If a button is pressed, and the station does not light up the button in White, this means that the button is not being detected properly and is defective.

Note: If an active DMX Input source is attached to the station, the Button Test will not function. See the “Testing DMX Input” section below.

Note: Don’t press the Top and Bottom buttons on the station simultaneously, as this combination will exit the Self Test mode.

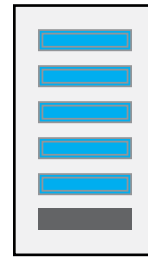

NOT PRESSED
All LEDs Cycling
Colors

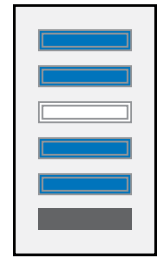

PRESSED
Button 3 White
Other LEDs Dim

Testing DMX Output

While the Self Test mode is operating, the station continuously outputs a DMX signal that matches the colors of the buttons.

If RGB LED lighting fixtures are attached to the station, these fixtures will output the same colors that the buttons are displaying. If a button is pressed on the station, the intensity of the DMX fixtures will reduce just like the brightness of the buttons.

Any other DMX fixtures can be attached to the station as well. Dimmers or other fixtures will output a pattern that matches the color cycle that the buttons are displaying.

Keep in mind that the DMX test signal might not produce a “pretty” scene on your specific fixtures, the idea is to verify that the station is sending a signal that the fixtures can understand.

Note: If an active DMX Input source is attached to the station, the DMX Output Test will not function. See the “Testing DMX Input” section below.

Testing DMX Input

If a valid DMX Input signal is attached to the station, the LED indicators switch to a special mode that shows the value of the first 15 channels received by the station. This mode overrides all other display modes of the LEDs.

Channels 1, 2 and 3 operate the Red, green and Blue components of Button 1. Channels 4, 5 and 6 operate the RGB components of Button 2, and so on.

This function can be used to verify that the station is able to correctly receive a DMX signal from another source.

To return to the regular Self Test functions, simply unplug or remove the DMX Input source.


Testing the IR Receiver

Whenever the station receives any valid IR transmissions from an RC5 compatible remote (such as the SceneStation Programmer's Remote), the buttons will display the RC5 System Code being received from the remote.

When received, the 5-bit RC5 system code appears on the LEDs. "1" bits in the code are shown as a Bright White LED and "0" bits in the code are shown as a Dim White LED. Button 1 shows the first bit and Button 5 shows the fifth bit.



Remote Code 1
RC5 Code \$1D

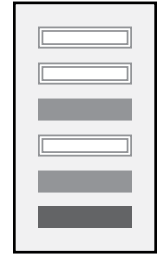

Remote Code 4
RC5 Code \$1A

The following table shows some of the possible bit combinations and how it translates to the SceneStation remote code being received from the remote:

SceneStation Code	RC5 System Code	Button 1	Button 2	Button 3	Button 4	Button 5
Remote Code 1	\$1D	White	White	White	-	White
Remote Code 2	\$1E	White	White	White	White	-
Remote Code 3	\$1F	White	White	White	White	White
Remote Code 4	\$1A	White	White	-	White	-
Remote Code 5	\$1B	White	White	-	White	White
Remote Code 6	\$1C	White	White	White	-	-
Direct Preset Code	\$19	White	White	-	-	White
N/A	All Others	<i>(all other combinations)</i>				

Note: Don't press the **CANCEL** button on the remote while testing IR codes, as this button will exit the Self Test mode.

Exiting the Self Test Mode

There are three ways to exit the Self Test mode:

- Press the Top and Bottom buttons on the station simultaneously.
- Press **CANCEL** on the remote control.
- Remove power from the station and then turn it back on.

Appendix E: Warranty Information

LIMITED WARRANTY

Interactive Technologies, Inc. (Interactive) warrants to You that, for a period of one year (the “Warranty Period”), your Interactive Product will be substantially free of defects in materials and workmanship under normal use. Your exclusive remedy and Interactive’s entire liability under this warranty will be for Interactive at its option to repair or replace the Product. This limited warranty extends only to the original purchaser. Proof of purchase may be required to obtain warranty coverage.

If the Product proves defective during the Warranty Period call Interactive Technical Support in order to obtain a Return Authorization Number, if applicable. If You are requested to return the Product, mark the Return Authorization Number clearly on the outside of the package. You are responsible for shipping defective Products to Interactive. Interactive pays for UPS Ground shipping from Interactive back to You only. Customers located outside of the United States of America and Canada are responsible for all shipping and handling charges.

ALL IMPLIED WARRANTIES AND CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THE WARRANTY PERIOD. ALL OTHER EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF NON-INFRINGEMENT, ARE DISCLAIMED. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to You. This warranty gives You specific legal rights, and You may also have other rights which vary by jurisdiction.

This warranty does not apply if the Product (a) has been altered, except by Interactive, (b) has not been installed, operated, repaired, or maintained in accordance with instructions supplied by Interactive, or (c) has been subjected to abnormal physical or electrical stress, misuse, negligence, or accident. In addition, due to the continual development of new techniques for intruding upon and attacking networks, Interactive does not warrant that the Product will be free of vulnerability to intrusion or attack.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL INTERACTIVE BE LIABLE FOR ANY LOST DATA, REVENUE OR PROFIT, OR FOR SPECIAL, INDIRECT, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE), ARISING OUT OF OR RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT (INCLUDING ANY SOFTWARE), EVEN IF INTERACTIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT WILL INTERACTIVE’S LIABILITY EXCEED THE AMOUNT PAID BY YOU FOR THE PRODUCT. The foregoing limitations will apply even if any warranty or remedy provided under this Agreement fails of its essential purpose. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to You.

Please direct all inquiries to: Interactive Technologies, Inc., 5040 Magnolia Creek Drive, Cumming, GA 30028.

